

741 Brushcutter



Документы

Engine

Starter assy and clutch


Tank and air filter

Transmission

Carburetor WT-EX 5487


Accessories

Illustrated parts list (Head "Load and Go" Ø130)

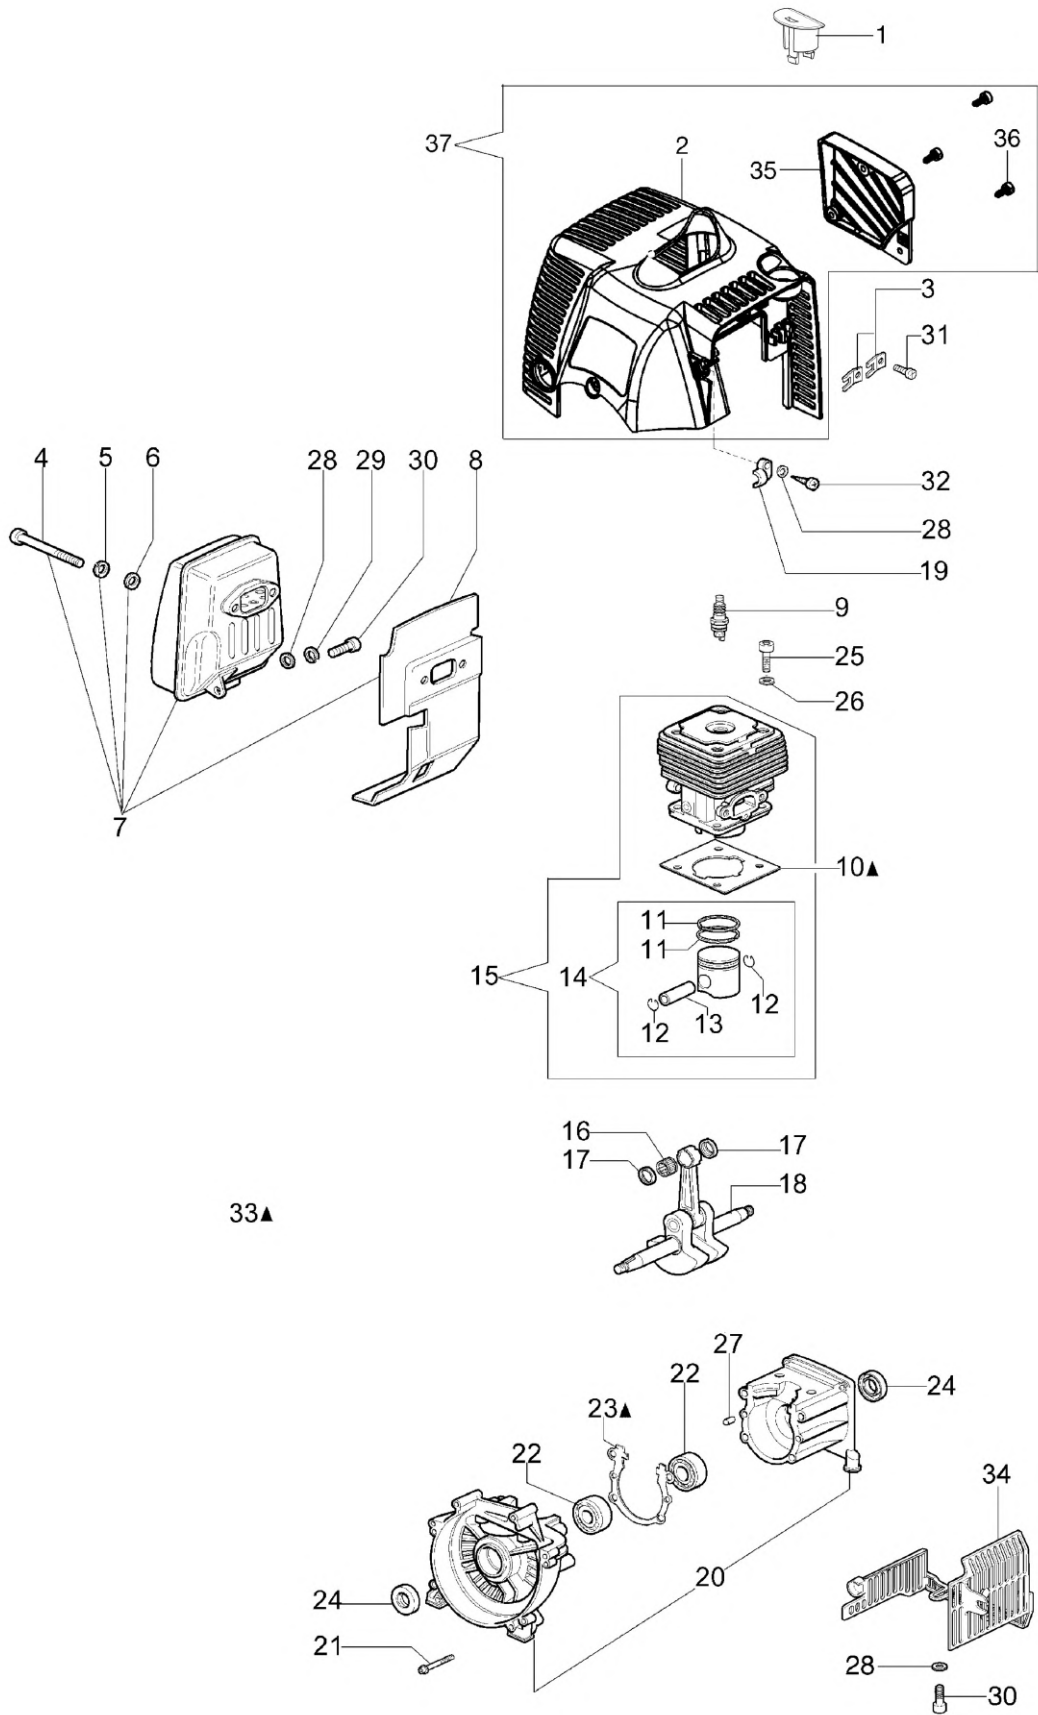


изображение Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61330103R	Cover				
2	1	61200078BR	Engine cover			Arancio ; Orange	
3	2	4191069BR	Plate				
4	2	3801065R	Screw				
5	2	3819036R	Washer				
6	1	3916006R	Washer				
7	1	61200061AR	Muffler				
8	1	61200063AR	Deflector				
9	1	3055115	Spark plug bpmr7a				
10	1	61350272R	Gasket				
11	2	074000405R	Piston ring				
12	2	004900061R	Ring				
13	1	50110047R	Piston pin				
14	1	50120034A	Piston assy Ø40				
15	1	61330204	Complete cylinder Ø40				
16	1	50110044R	Bearing				
17	2	50110043AR	Spacer				
18	1	61200001R	Crankshaft				
19	1	61200064R	Stopper				
20	1	61330067	Crankcase assy				
21	1	3860096R	Screw				
22	2	094000006R	Bearing				
23	1	61200006AR	Gasket				
24	2	094000099R	Seal ring				
25	4	094000101R	Screw				
26	4	3833073R	Washer				
27	2	3023008R	Plug				
28	3	3916005R	Washer				
29	1	3819006R	Washer				
30	3	3801010R	Screw				
31	2	3960030R	Screw				
32	1	3960069AR	Screw				
33	1	61202038BR	Gasket set				
34	1	61330054BR	Guard				
35	1	61330079R	Cover				
36	3	3893009R	Screw				
37	1	61330081AR	Cylinder cover set			Arancio ; Orange	

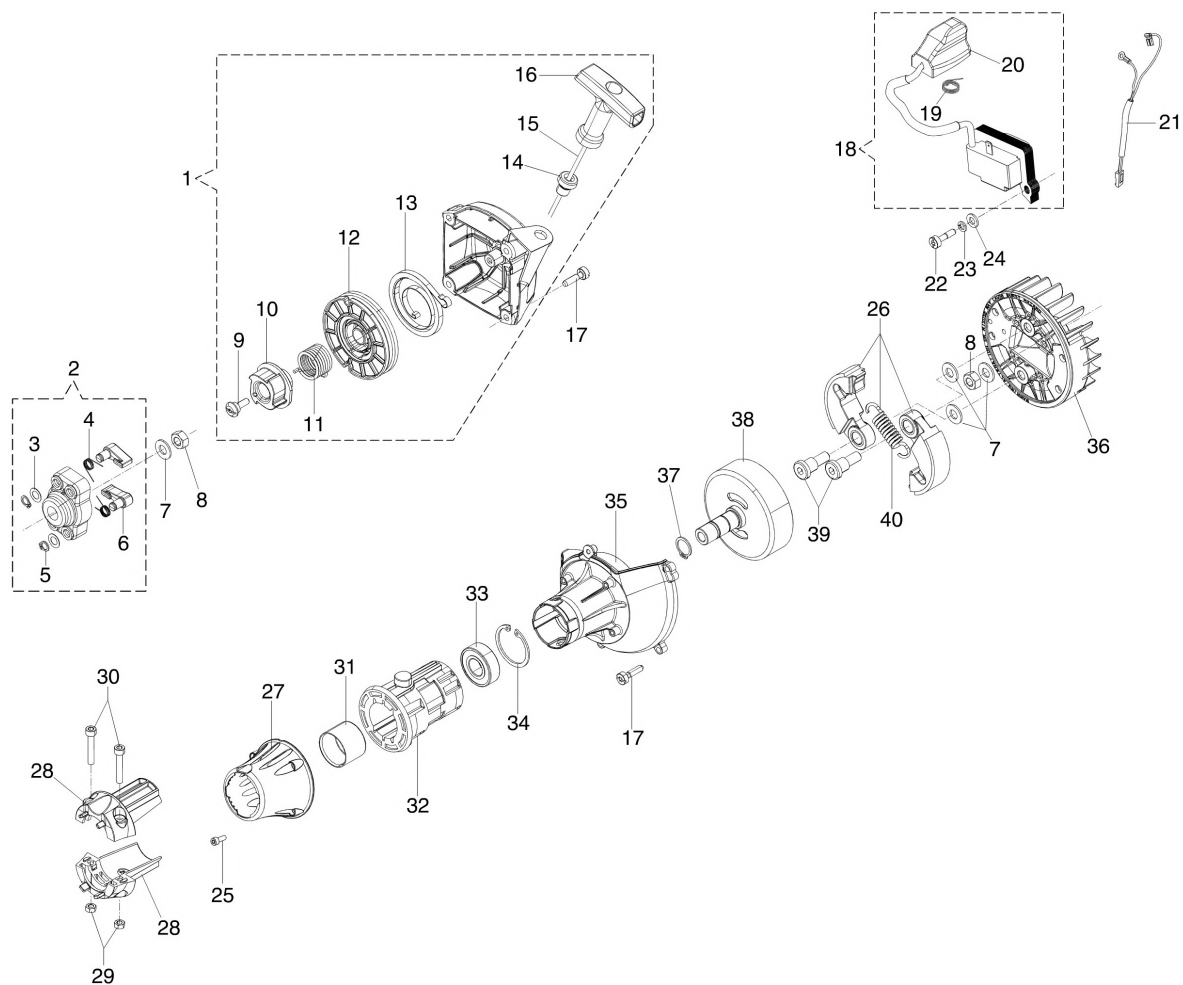



изображение Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61332012R	Starter assy			Arancio ; Orange	
2	1	61350142	Clutch driver				
3	2	3064010R	Washer				
4	2	4191017A	Spring				
5	2	3024007R	Ring				
6	1	61350145R	Pawl				
7	4	3818011AR	Washer				
8	2	3912009	Nut				
9	1	50160024	Screw				
10	1	61350204AR	Sprocket				
11	1	61350203BR	Spring				
12	1	61350139R	Starter pulley				
13	1	004000132R	Spring				
14	1	072700089R	Bushing				
15	1	4098073R	Starter rope				
16	1	61200015R	Starter handle				
17	9	3801010R	Screw				
18	1	61250015CR	Ignition coil				
19	1	50050127	Spring				
20	1	61200012AR	Spark plug cap				
21	1	61250282AR	Cable				
22	2	3801013R	Screw				
23	2	3819006R	Washer				
24	2	3916006R	Washer				
25	1	3893060R	Screw				
26	1	4191153BR	Clutch				
27	1	61200296R	Cover				
28	2	61200192AR	Adaptor				
29	2	3914003R	Nut				
30	2	3801015R	Screw				
31	1	4196038R	Bushing				
32	1	4196037R	Sleeve				
33	1	3035042R	Bearing				
34	1	3025022R	Ring				
35	1	61200298R	Starter case				
36	1	61250014AR	Flywheel				
37	1	3024015R	Ring				
38	1	4191030R	Clutch drum				
39	2	4191027FR	Pin				
40	1	4191028R	Spring				

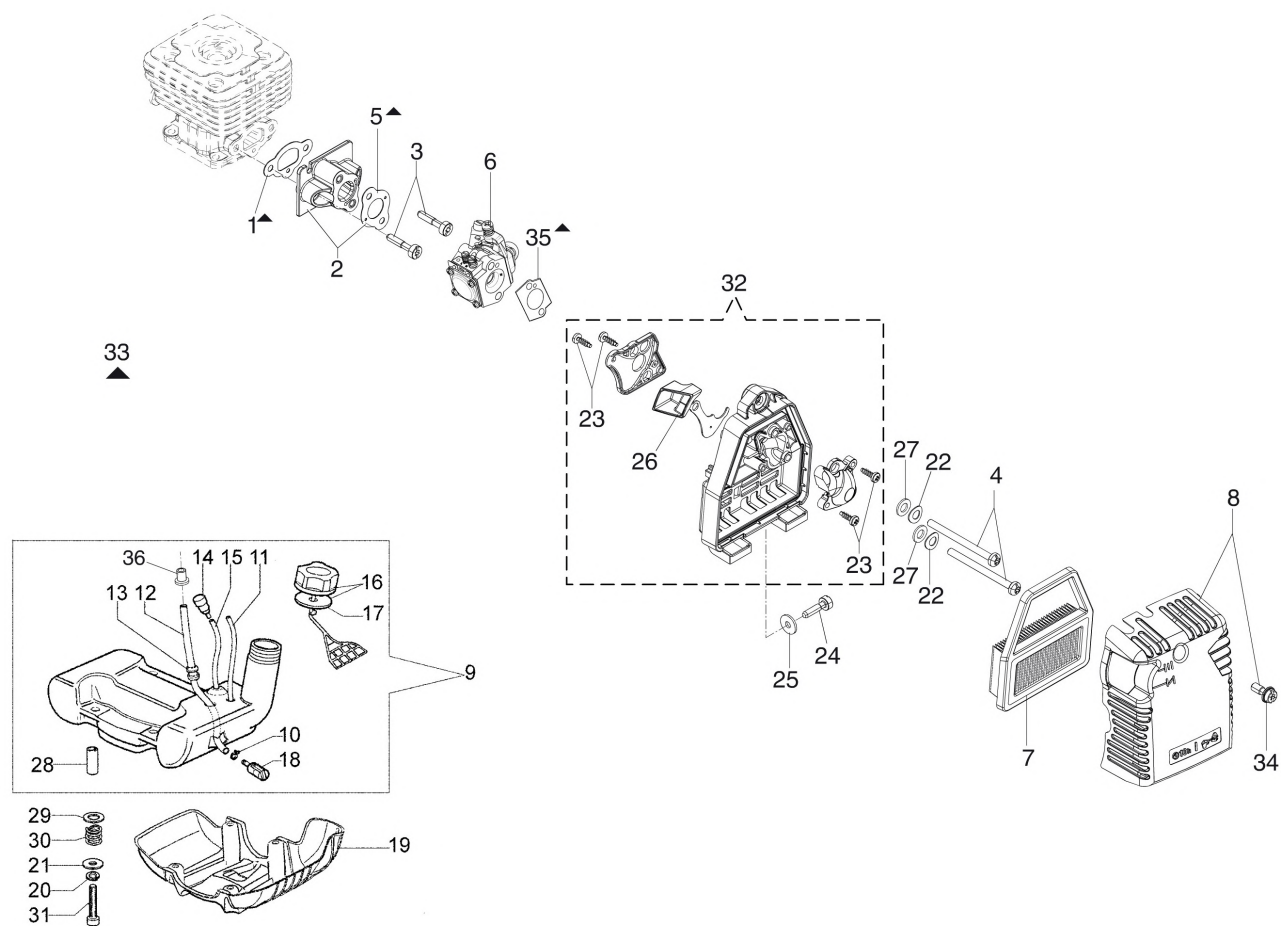

изображение Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	2	3801015R	Screw				
4	2	3891067R	Screw				
5	1	61200196AR	Gasket				
6	1	2318653R	Carburetor				
7	1	61380013AR	Air filter				
8	1	61330131	Filter cover kit		8670096257		BT3-145-04/20
8	1	61330249	Filter cover kit	S/N 8670096258			BT3-145-04/20
9	1	61330135AR	Complete tank				
10	1	4098377R	Band				
11	1	61250228R	Tube				
12	1	3073014R	Tube				
13	1	4161211R	Bush				
14	1	61070011AR	Breather valve				
15	1	61250228R	Tube				
16	1	61372003R	Tank cap				
17	1	61070006R	Gasket				
18	1	50010218R	Fuel filter				
19	1	61200238AR	Guard				
20	5	3819006R	Washer				
21	5	3918005R	Washer				
22	2	3833073R	Washer				
23	4	3960087AR	Screw				
24	1	3891048R	Screw				
25	1	3918005R	Washer				
26	1	61380074AR	Starter lever				
27	2	3916005R	Washer				
28	4	61200128R	Spacer				
29	4	3916008R	Washer				
30	4	61200129R	Spring				
31	4	3801016R	Screw				
32	1	61382040AR	Air filter support set		S/N 8670096257		BT3-145-04/20
32	1	61332050R	Air filter support set	S/N 8670096258			BT3-145-04/20
33	1	61202038BR	Gasket set				
34	1	61330040AR	Screw				
35	1	61350155R	Flange				
36	1	61280105	Band				

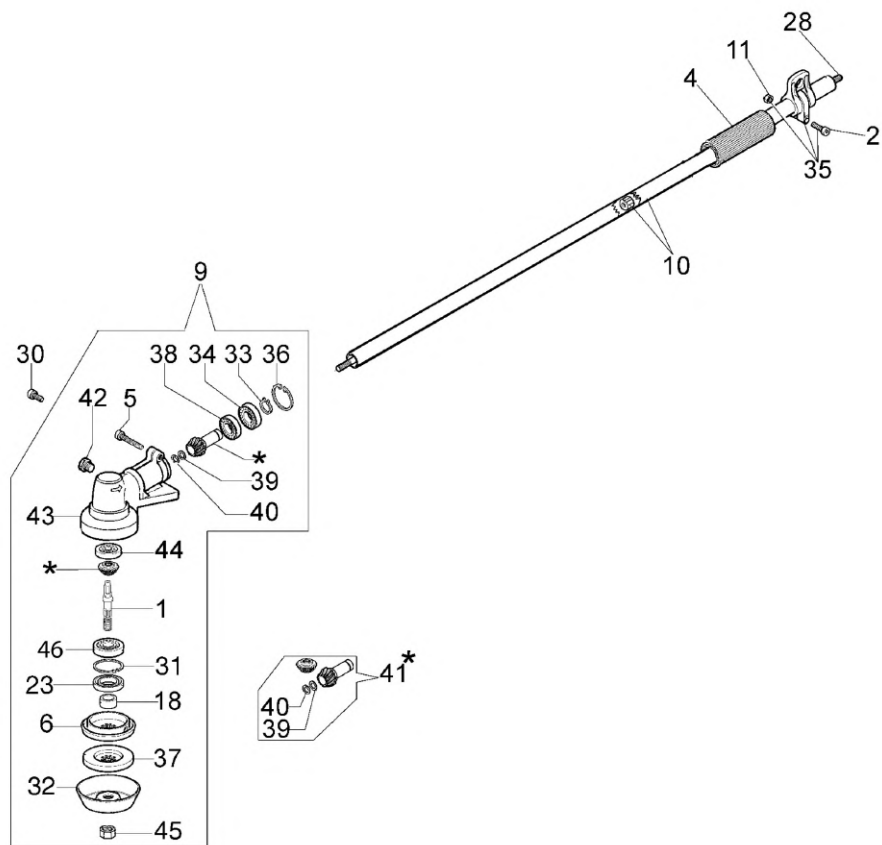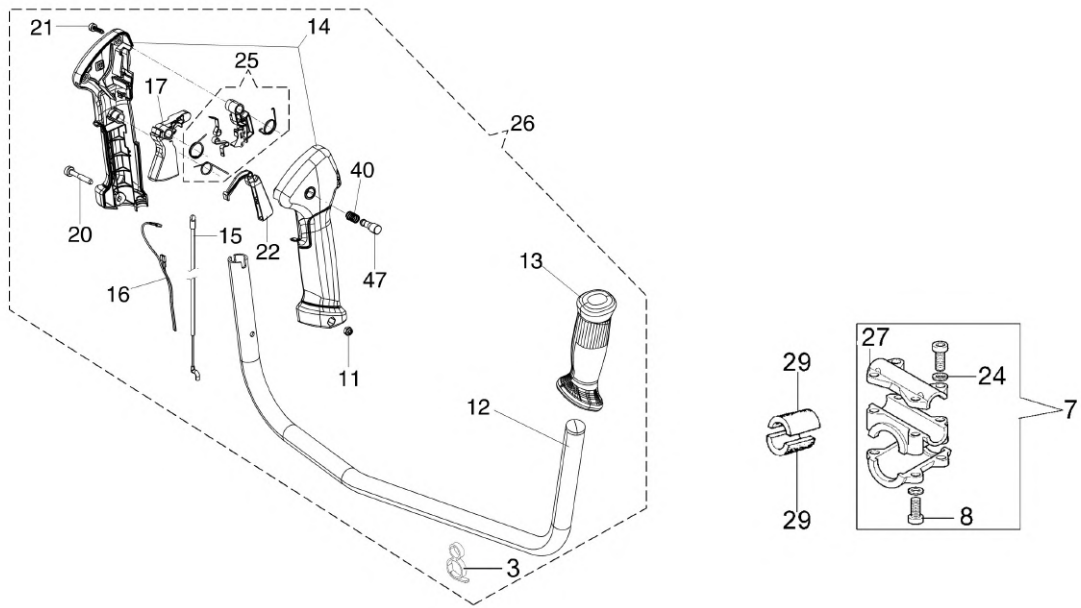


изображение Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61250054R	Pin				
2	1	3801015R	Screw				
3	2	61170132R	Grommet				
4	1	4179094AR	Knob				
5	1	3901016	Screw				
6	1	61040145R	Hub				
7	1	074000183AR	Clamp				
8	4	3801011R	Screw				
9	1	61250287A	Bevel gear Ø28				
10	1	61252049R	Tube Ø28				
11	8	3914003R	Nut				
12	1	4174187ER	Handlebar				
13	1	61040140R	Knob				
14	1	61380097	Pair of handles				
15	1	61380066R	Throttle cable				
16	1	61330130R	Cable				
17	1	61380064R	Throttle lever				
18	1	61040066R	Spacer				
19	1	3034012R	Bearing				
20	1	3891054R	Screw				
21	4	3893016AR	Screw				
22	1	61370114R	Lever				
23	1	3050018R	Seal ring				
24	2	3819006R	Washer				
25	1	61370294	Lever group				
26	1	61332020R	Complete handle				
27	1	072700264CR	Clamp				
28	1	61202109R	Shaft				
29	2	074000035R	AV-mount				
30	1	3901008R	Screw				
31	1	3025022R	Ring				
32	1	61110074R	Guard				
33	1	3024012R	Snap ring				
34	1	3035023R	Bearing				
35	1	4179194AR	Band Ø28				
36	1	3025019	Ring				
37	1	4179089R	Flange				
38	1	3034019R	Bearing				
39	1	4138311A	Ring				
40	1	3025009	Ring				
41	1	61040133A	Bevel gear set				
42	1	61040071R	Cap				
43	1	61040144R	Gear case				
44	1	3034218R	Bearing				
45	1	61110075R	Nut				
46	1	3034012R	Bearing				





изображение Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
47	1	56550185R	Button				

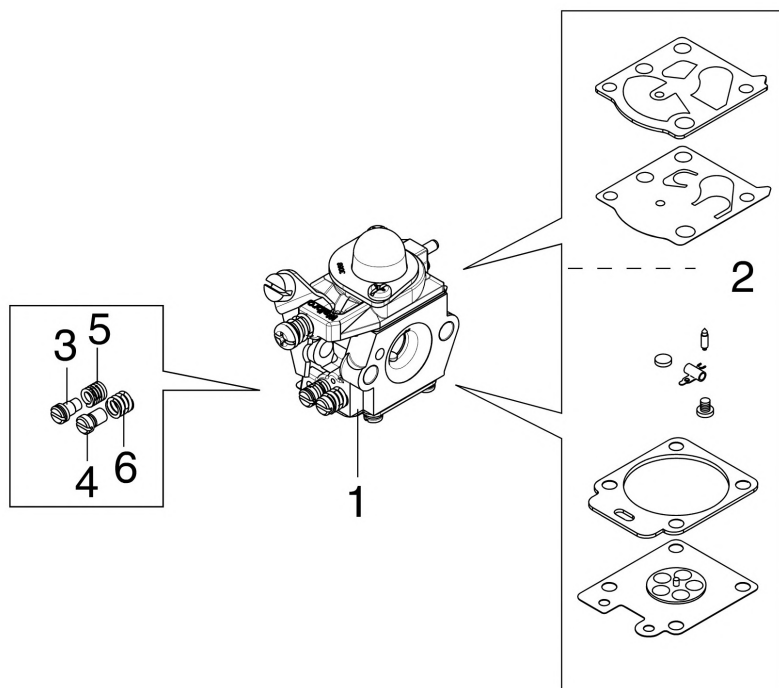


изображение Carburetor WT-EX 5487

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318653R	Carburetor				
2	1	2318671	Repair kit				
3	1	2318004R	Adjust. screw MIN				
4	1	2318005R	Adjust. screw MAX				
5	1	035000165	Spring				
6	1	093500115	Spring				

 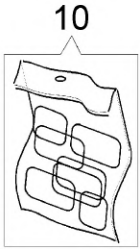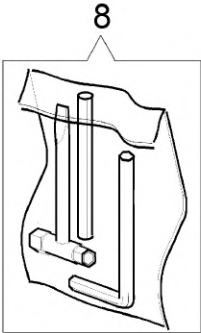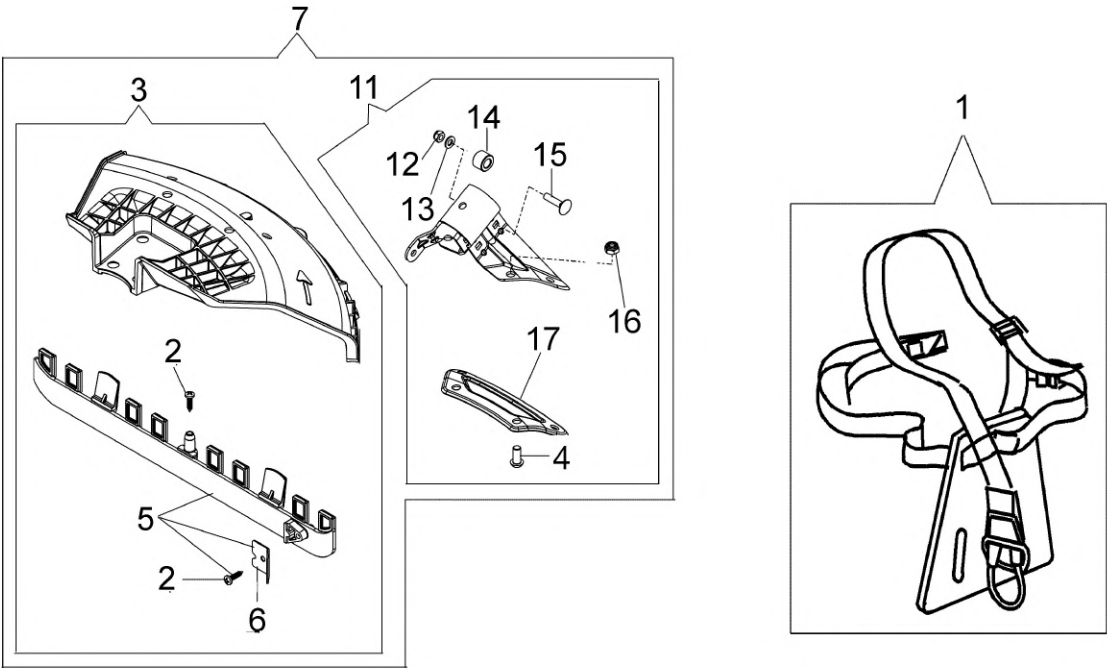

изображение Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200106R	Harness				
2	2	3960032R	Screw				
3	1	61330232	Guard			Arancio ; Orange	
4	1	3933020R	Screw				
5	1	4179113AR	Skirt w/blade				
6	1	4174275R	Blade				
7	1	61330049	Guard kit			Arancio ; Orange	
8	1	61052031R	Tool kit				
9	1	4095675BR	Special steel blade for gras cutting			Optional	
10	1	61330140	Labels kit				
11	1	61330042	Band				
12	1	3914003R	Nut				
13	1	3916005R	Washer				
14	1	61330042	Band				
15	1	3910005	Screw				
16	1	3914006R	Nut				
17	1	61330039	Plate				

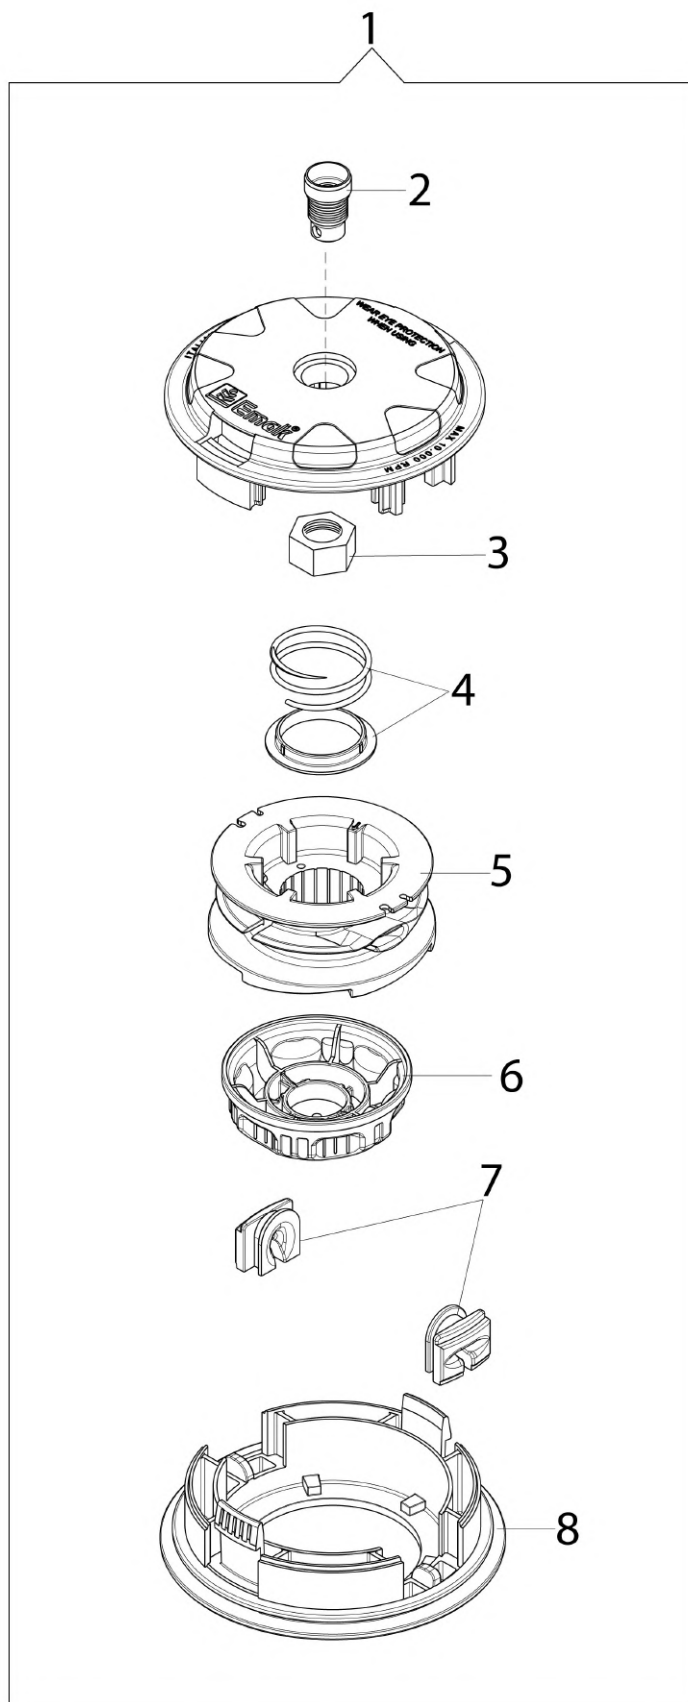

изображение Illustrated parts list (Head "Load and Go" Ø130)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129015	Head Load&Go			ExtraLife	
1	1	63129008	Head Load&Go			Easy&LongLife	
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Ignition coil				
6	1	63120030AR	Knob			ExtraLife	
6	1	63120007AR	Knob			Easy&LongLife	
7	2	63120001R	Bushing				
8	1	63120005R	Cover				