

956 Chainsaw




Документы

Engine and starter



Crankcase and chain brake

Tank and air filter



Carburetor HDA-160F

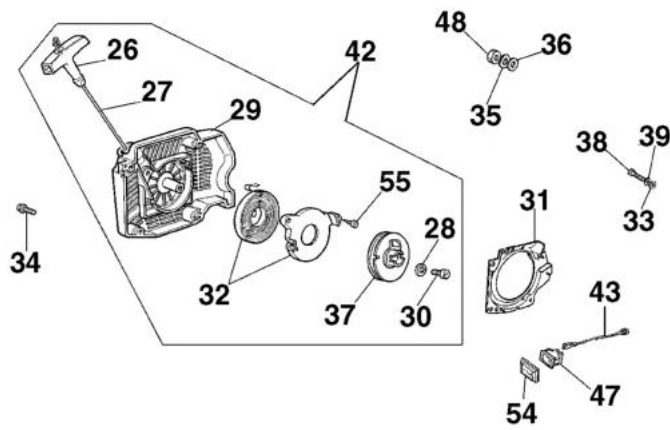

 Fino a - till - bis - hasta
 Jusqu'a - do: 28/10/07
 Serial nr. 0307439999


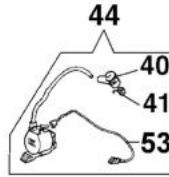


Fino a - till - bis - hasta
 Jusqu'a - do: 28/10/07
 Serial nr. 0307439999

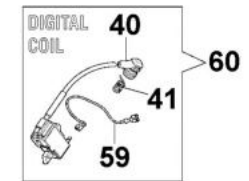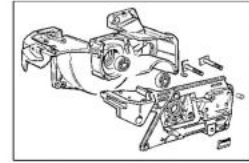

Da - from - ab - desde
 Depuis - od: 29/10/07
 Serial nr. 9627430001

56

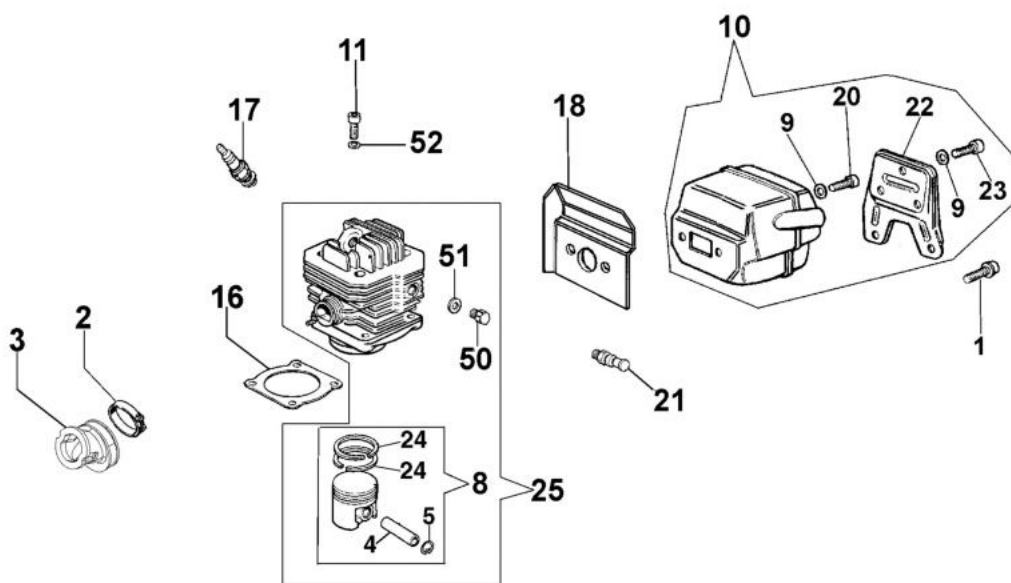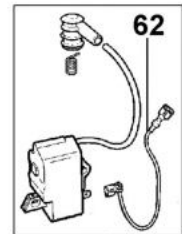

49
 Kit etichette
 Labels set
 Jeu etiquette
 Juego etiquetas
 Etikettenkit


12
 kit guarnizioni
 Gasket set
 Jeu joints
 Juego juntas
 Dichtungenkit

изображение Engine and starter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	097000092AR	Screw				
2	1	50200015AR	Band				
3	1	50010026R	Manifold				
4	1	50010031R	Piston pin				BT4-125-05/07
5	2	007201198R	Ring				BT4-125-05/07
6	1	3037014R	Bearing				
7	1	50010115R	Crankshaft				
8	1	50012024	Piston assy		SN 0306361391		BT4-125-05/07
8	1	50010320	Piston assy	SN 0306361392			BT4-125-05/07
9	2	3033074	Washer				
10	1	50022044R	Muffler				
11	4	005100906AR	Screw				
12	1	50012052B	Gasket set				
13	2	3034012R	Bearing				
14	1	094500004R	Seal ring				
15	1	094500028R	Key				
16	1	50010046DR	Gasket				
17	1	3055114	Spark plug				
18	1	50010058AR	Gasket				
19	1	007201313R	Seal ring				
20	2	3801045R	Screw				
21	1	50010215R	Decompressor				
22	1	50010145	Cover				
23	3	3801052R	Screw				
24	2	50010033R	Piston ring				BT4-125-05/07
25	1	50012095B	Cylinder				BT4-125-05/07
26	1	097000064AR	Starter handle				
27	1	098000079R	Starter rope				
28	1	3918006	Washer				
29	1	50010172BR	Starter case				
30	1	3908036	Screw				
31	1	50010019AR	Flange				
32	1	098000060AR	Spring				
33	2	3916004R	Washer				
34	4	097000092AR	Screw				
35	1	3833080R	Washer				
36	1	3916009R	Washer				
37	1	52010439CR	Pulley				BT4-119-10/06
38	2	094000227	Screw				
39	2	006000315R	Washer				
40	1	094600097AR	Spark plug cap				
41	1	094600169AR	Spring				
42	1	50012069DR	Starter assy				
43	1	097000121A	Cable				
44	1	50020007BR	Ignition coil				BT4-129-01/08
45	1	52020061R	Flywheel				BT4-129-01/08

изображение Engine and starter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
46	1	52012027	Pawl kit				BT4-129-01/08
47	1	2317021R	Switch				
48	1	004000142R	Nut				
49	1	50012074	Labels kit				
50	1	52010093	Screw				BT4-125-05/07
51	1	3078012	Washer				BT4-125-05/07
52	4	3833076	Washer				
53	1	097000122AR	Cable				BT4-129-01/08
54	1	2317013	Guard				
55	2	3960017AR	Screw				
56	1	50010342C	Crankcase				BT4-129-01/08
57	1	52012027	Pawl kit				BT4-129-01/08
58	1	50010331BR	Flywheel				BT4-129-01/08
59	1	50020073R	Cable				BT4-129-01/08,
60	1	50020061AR	Ignition coil				BT4-129-01/08,
61	1	50020061AR	Ignition coil				BT4-135-07/09, BT4-125-04/09
62	1	50020073R	Cable				BT4-135-07/09

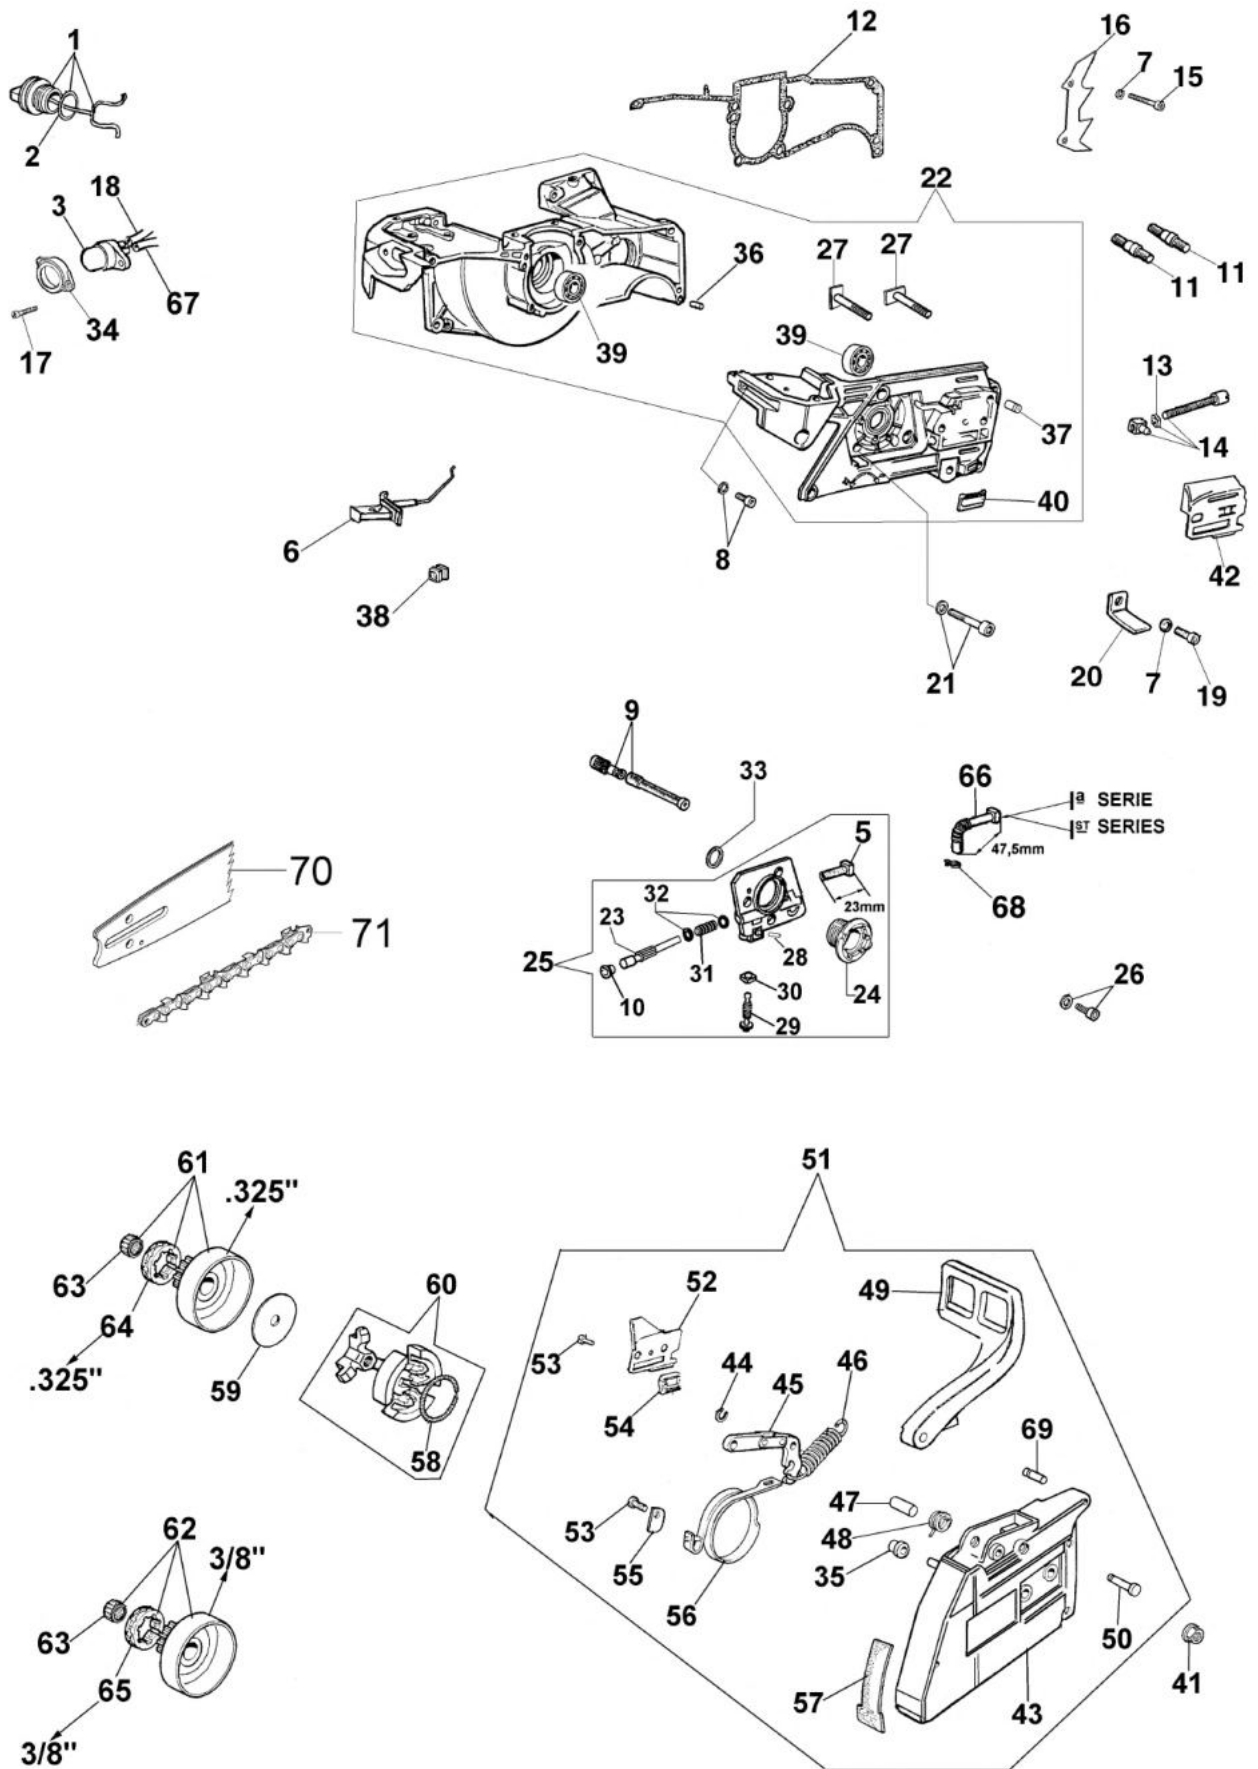


изображение Crankcase and chain brake

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50012009R	Cap				
2	1	099900090R	Ring				
3	1	50010032R	Air purge				
5	1	50010163R	Tube				
6	1	50010065R	Starter lever				
7	8	3833073R	Washer				
8	1	093800060B	Screw				
9	1	097000147AR	Oil suction				
10	1	097000078	Cap				
11	2	094500141AR	Stud				
12	1	50010047AR	Gasket				
13	1	50010079	Clamp				
14	1	50010151	Chain tensioner				
15	4	006100303R	Screw				
16	1	50010050B	Spike				
17	1	3960106R	Screw				
18	1	3073007R	Tube				
19	1	006000251R	Screw				
20	1	50250226R	Clamp				
21	4	3801035	Screw				
22	1	50010346C	Crankcase				BT4-129-01/08
23	1	097000069B	Piston pump				
24	1	50010036AR	Worm gear				BT4-120-11/06
25	1	50012138	Oil pump				BT4-120-11/06
26	3	006000024R	Screw				
27	2	50010301R	Screw				
28	1	097000062	Plug				
29	1	50010037	Screw				
30	1	097000068	Clamp				
31	1	097000071A	Spring				
32	2	097000070	Washer				
33	1	50010044	Washer				
34	1	50010175	Guard				
35	1	006000300	Bushing				
36	1	3023008R	Plug				
37	1	097000229R	Breather valve				
38	1	097000057R	Grommet				
39	2	3034012R	Bearing				
40	1	50070149	Guard				
41	2	50010148R	Nut				
42	1	50010010AR	Plate				
43	1	50012003DR	Chain cover				BT4-133-10/08
44	1	3026003R	Ring				
45	1	097000146	Lever				
46	1	099900152A	Spring				
47	1	097000107	Plug				


изображение Crankcase and chain brake

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
48	1	50010088AR	Spring				
49	1	50010040	Guard				
50	1	097000106R	Plug				
51	1	50012002DR	Chain cover				BT4-133-10/08
52	1	50070124AR	Plate				
53	1	3960045	Screw				
54	1	50070149	Guard				
55	1	50010084	Plate				
56	1	50010039	Brake band				
57	1	50010353R	Deflector				BT4-133-10/08
58	1	004900137BR	Spring				
59	1	375100012AR	Washer				
60	1	50012023AR	Clutch				
61	1	50012050	Clutch drum				
62	1	50022034	Clutch drum				
63	1	3037016	Bearing				
64	1	094500046R	Ring				
65	1	006100730R	Ring				
66	1	50010060	Oil line				
67	1	61290089R	Breather fuel pipe				
68	1	3059003	Band				
69	1	50010243R	Pin				
70	1	50022009R	Bar 16 - cm 41				
70	1	50022010R	Bar 18" - 46 cm				
70	1	50022011R	Bar 20" - 51 cm				
70	1	50012037R	Bar 20" - 51 cm				
70	1	50012036R	Bar 18" - 46 cm				
70	1	50012035R	Bar 16" - 41 cm				
71	1	001000453R	Chain .3/8 x .058 (1.5mm) - 60 links				
71	1	30629001A	Chain .3/8" x .058" (1,5mm) - 68 links				
71	1	30629002A	Chain .3/8" x .058" (1,5mm) - 72 links				
71	1	30629008A	Chain .325" x .058" (1,5mm)				
71	1	30629007A	Chain .325" x .058" (1,5mm) - 72 links				
71	1	001000710R	Chain .325" x .058" (1,5mm)				

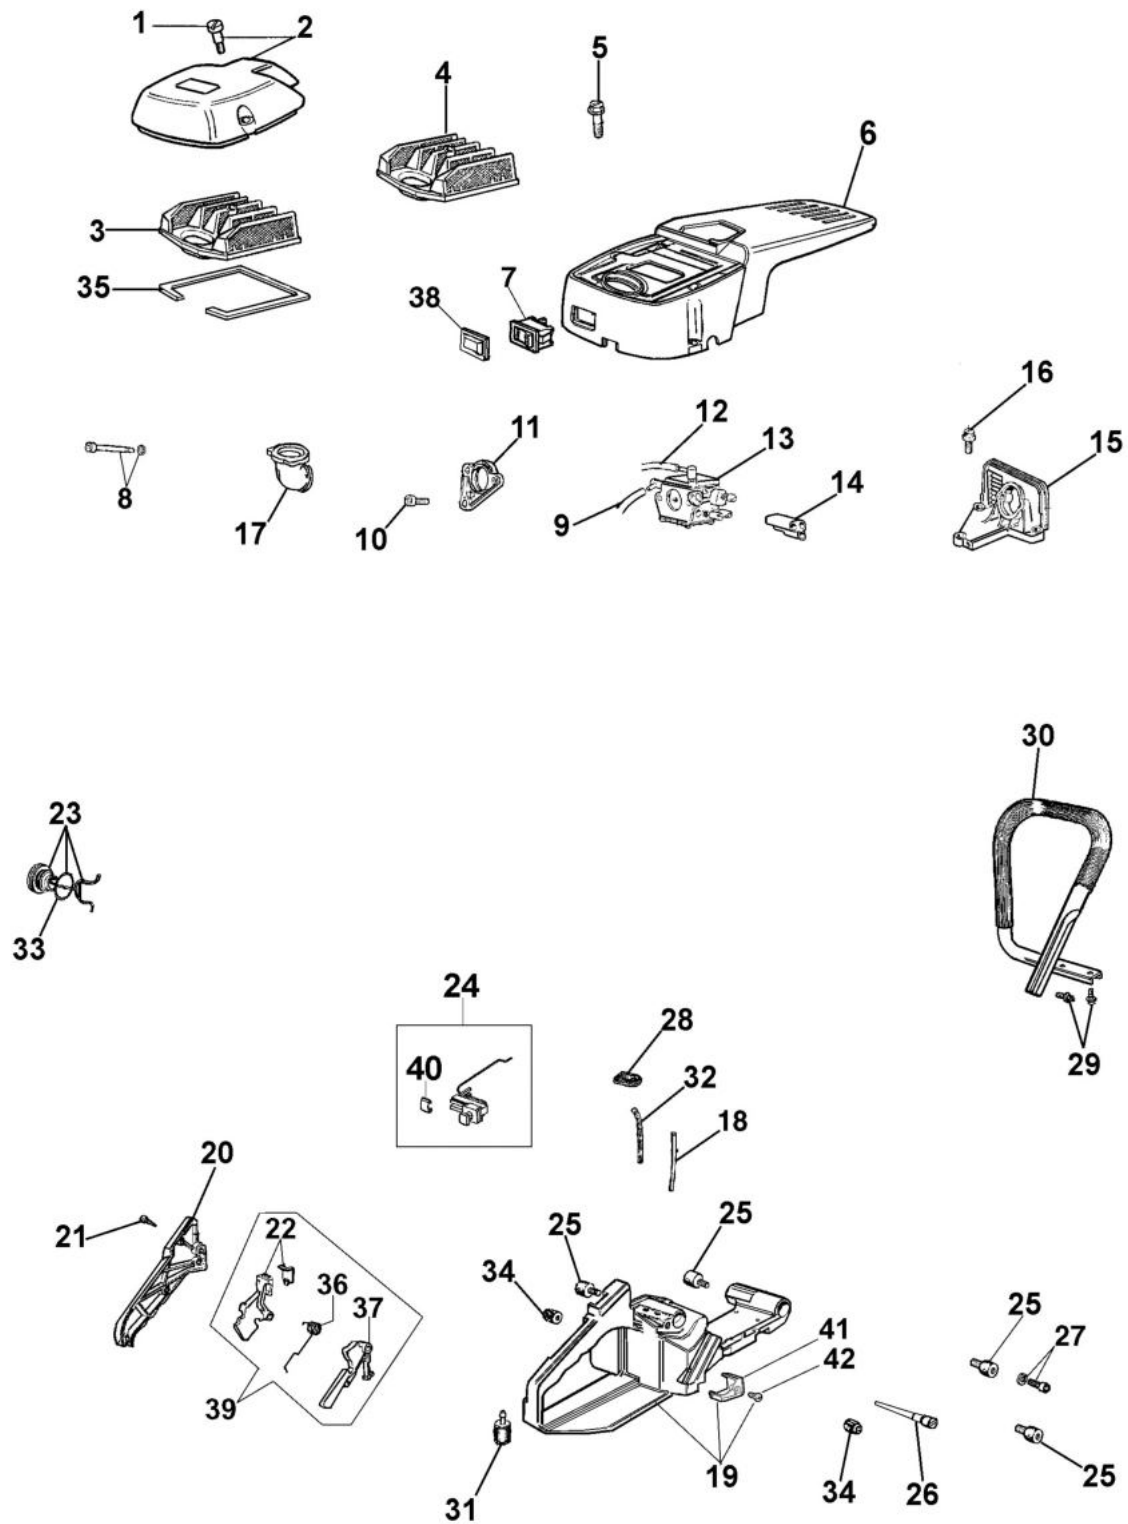

изображение Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	093000468A	Screw				
2	1	50010121AR	Cover				
3	1	50010367R	Air filter				BT1-019-07/07
4	1	098000092R	Air filter nylon				BT1-019-07/07
5	1	099900296R	Screw				
6	1	50022055R	Cover				
7	1	2317021R	Switch				
8	2	61052009BR	Screw				
9	1	098000319R	Tube				
10	3	3893060R	Screw				
11	1	50010028	Flange				
12	1	094000215AR	Tube				
13	1	50010302A	Carburetor kit HDA-160C				
14	1	50010125	Screw guide				
15	1	50010017	Support				
16	3	097000092AR	Screw				
17	1	50010027R	Manifold				
18	1	61290089R	Breather fuel pipe				
19	1	50010173GR	Fuel tank	SN 9621040001			BT4-136-07/09, BT4-147-02/11
20	1	50010024BR	Cover				
21	1	3960040R	Screw				
22	1	50010157	Throttle lever				
23	1	50012008R	Cap				
24	1	52022048A	Throttle rod				BT4-136-07/09
25	4	097000038AR	AV-mount				
26	1	099900083B	Breather valve				
27	8	006000251R	Screw				
28	1	50010029	Grommet				
29	1	097000061AR	Screw				
30	1	50020016R	Handle				
31	1	50010218R	Fuel filter				
32	1	098000319R	Tube				
33	1	099900090R	Ring				
34	2	50010061R	AV-mount				
35	1	097000056R	Gasket				
36	1	097000028R	Spring				
37	1	097000025AR	Lever				
38	1	2317013	Guard				
39	1	097000216B	Throttle kit				
40	1	52010134R	Plate				BT4-136-07/09
41	1	50250025R	Guard	SN 9621040001		Arancio; Orange	BT4-147-02/11
42	1	3960098R	Screw	SN 9621040001			BT4-147-02/11

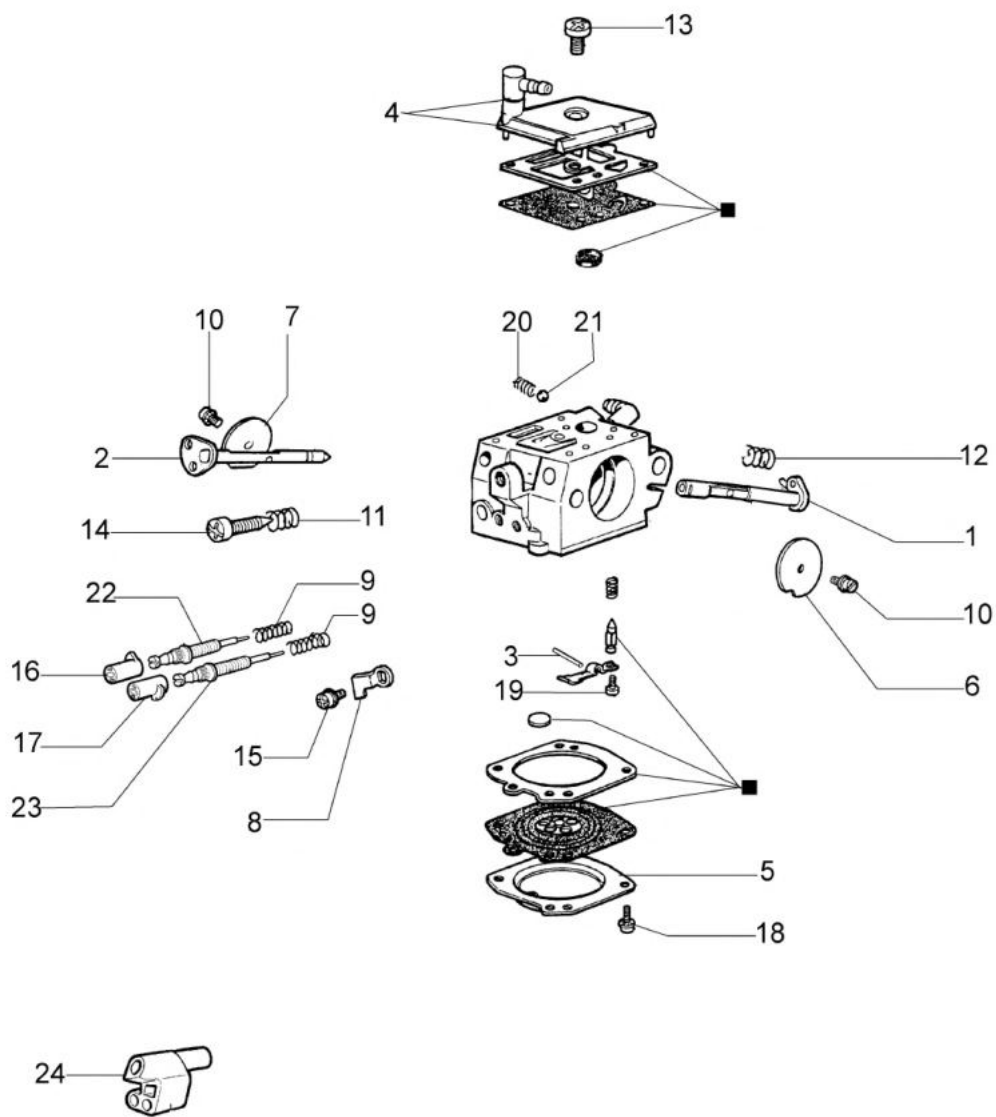

26 ■ Kit riparazione
Repair kit

изображение Carburetor HDA-160F

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010095	Shaft				
2	1	50010096	Shaft				
3	1	003300201	Spindle				
4	1	50010097	Cover				
5	1	50010098	Cover				
6	1	50010099	Shutter				
7	1	50010100	Shutter				
8	1	50010101	Clamp				
9	1	095000147	Spring				
10	2	035000160	Screw				
11	1	094600148	Spring				
12	1	50010106	Spring				
13	1	50010109	Screw				
14	1	074000240	Adjust. screw				
15	1	003300209	Screw				
16	1	2318694	Cap				
17	1	2318695	Cap				
18	1	035000162	Screw				
19	1	003300202	Screw				
20	1	095000146	Spring				
21	1	094600143	Ball				
22	1	2318782	Screw H				
23	1	2318781	Screw L				
24	1	50010125	Screw guide				
26	1	2318673	Repair kit				