

## PGE 80E-3 DCS Generator



### Документы

Engine

Cylinder head

Crankcase

Crankcase cover

Crankshaft and piston

Valve train - distribution

Starter assy

Electric starter assembly

Carburetor

Ignition group

Air filter

Control levers

Muffler

Tank


Generator group

Frame

Control Panel

Battery


Transport wheels

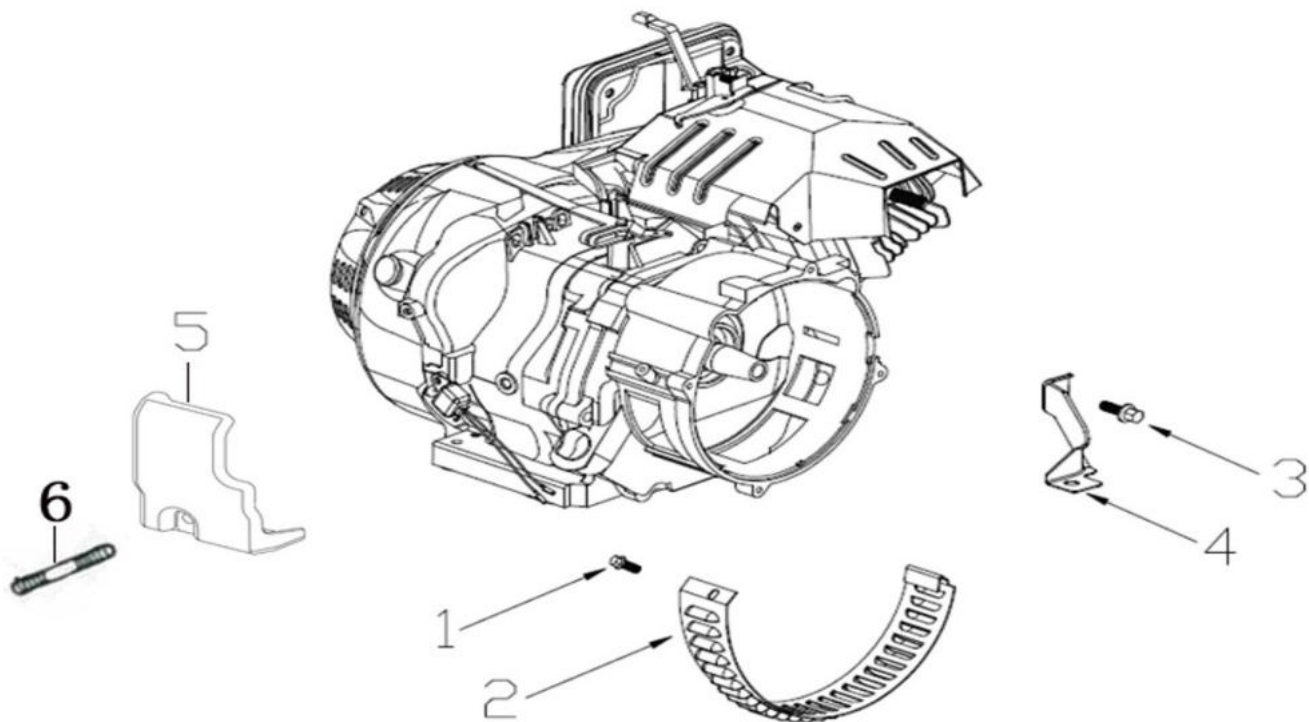

## изображение Engine


---

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152266	Screw				
2	1	L66152267	Cover				
3	1	L66152247	Screw				
4	1	L66152268	Bracket				
5	1	L66152269	Cover				
6	1	L66152270	Stud				

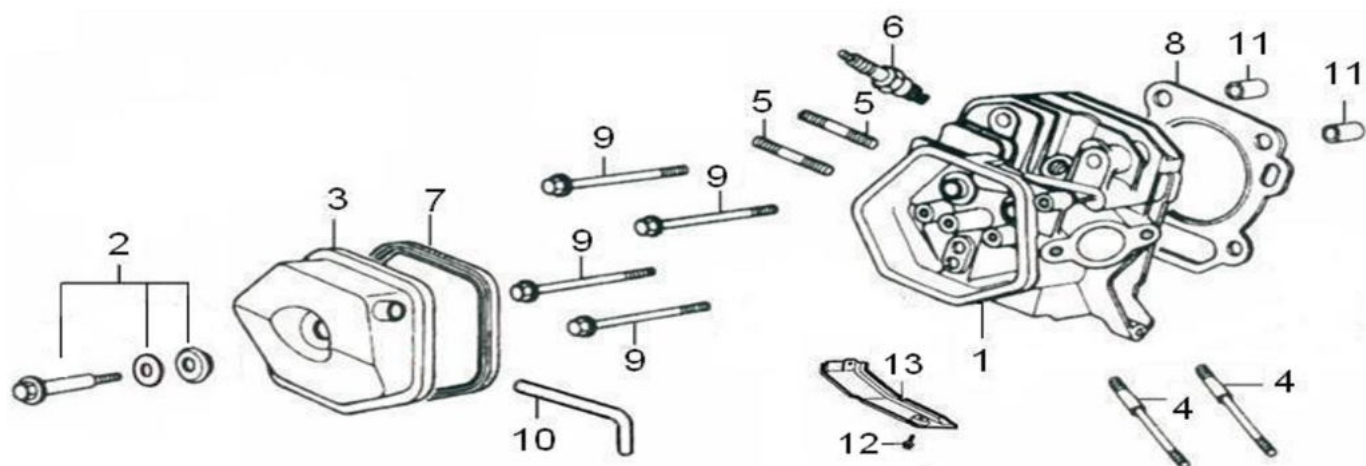


## изображение Cylinder head

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152271	Cylinder				
2	1	L66152272	Screw				
3	1	L66152273	Cover				
4	2	L66152274	Stud				
5	2	L66152085	Stud				
6	1	L66152086	Spark plug				
7	1	L66152275	Seal ring				
8	1	L66152276	Gasket				
9	4	L66152277	Screw				
10	1	L66152278	Breather fuel pipe				
11	2	L66152279	Pin				
12	1	L66152247	Screw				
13	1	L66152280	Deflector				

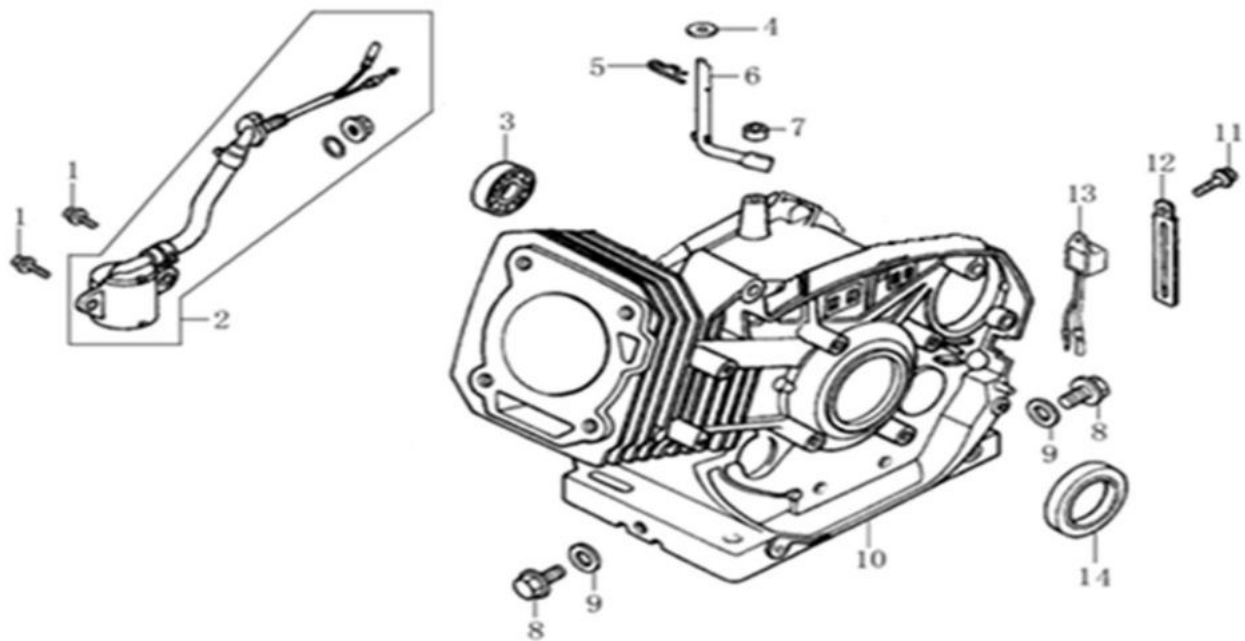

## изображение Crankcase


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66152090	Screw				
2	1	L66152281	Oil sensor				
3	1	L66152282	Bearing				
4	1	L66152283	Washer				
5	1	L66152102	Clip				
6	1	L66152284	Regulating lever				
7	1	L66152285	Seal ring				
8	2	L66152286	Screw				
9	2	L66152287	Washer				
10	1	L66152288	Crankcase				
11	1	L66152247	Screw				
12	1	L66152289	Fairled				
13	1	L66152096	Guard				
14	1	L66152295	Seal ring				

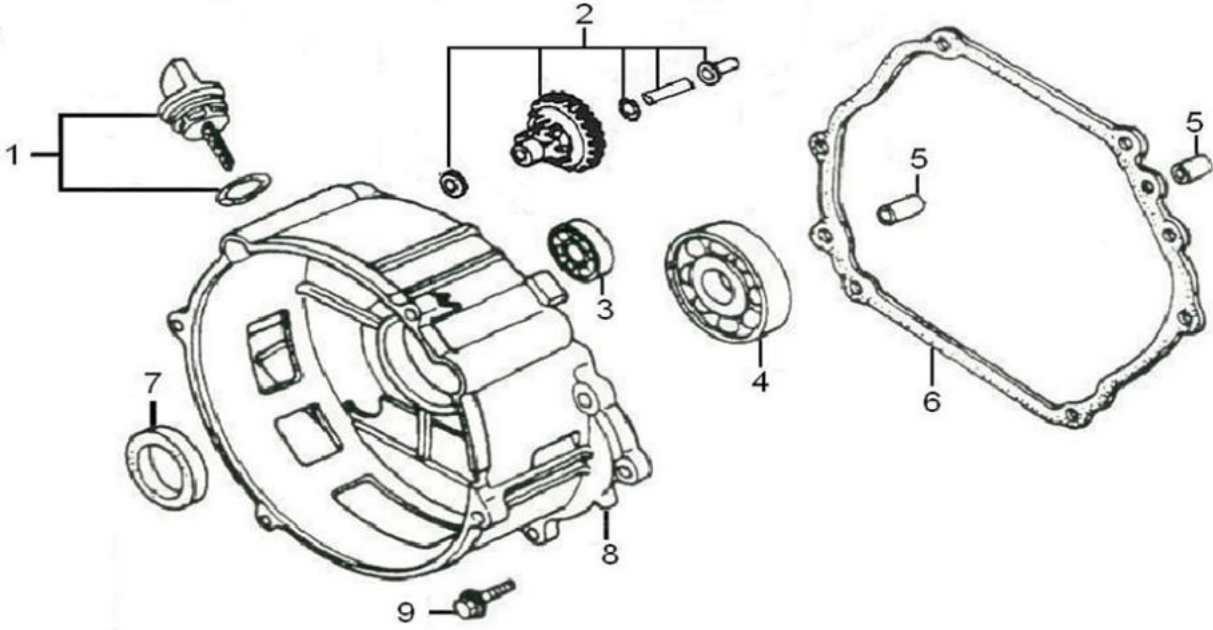



## изображение Crankcase cover


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152290	Oil cap				
2	1	L66152291	Governor				
3	1	L66152282	Bearing				
4	1	L66152292	Bearing				
5	2	L66152293	Pin				
6	1	L66152294	Gasket				
7	1	L66152295	Seal ring				
8	1	L66152296	Crankcase cover				
9	7	L66152297	Screw				

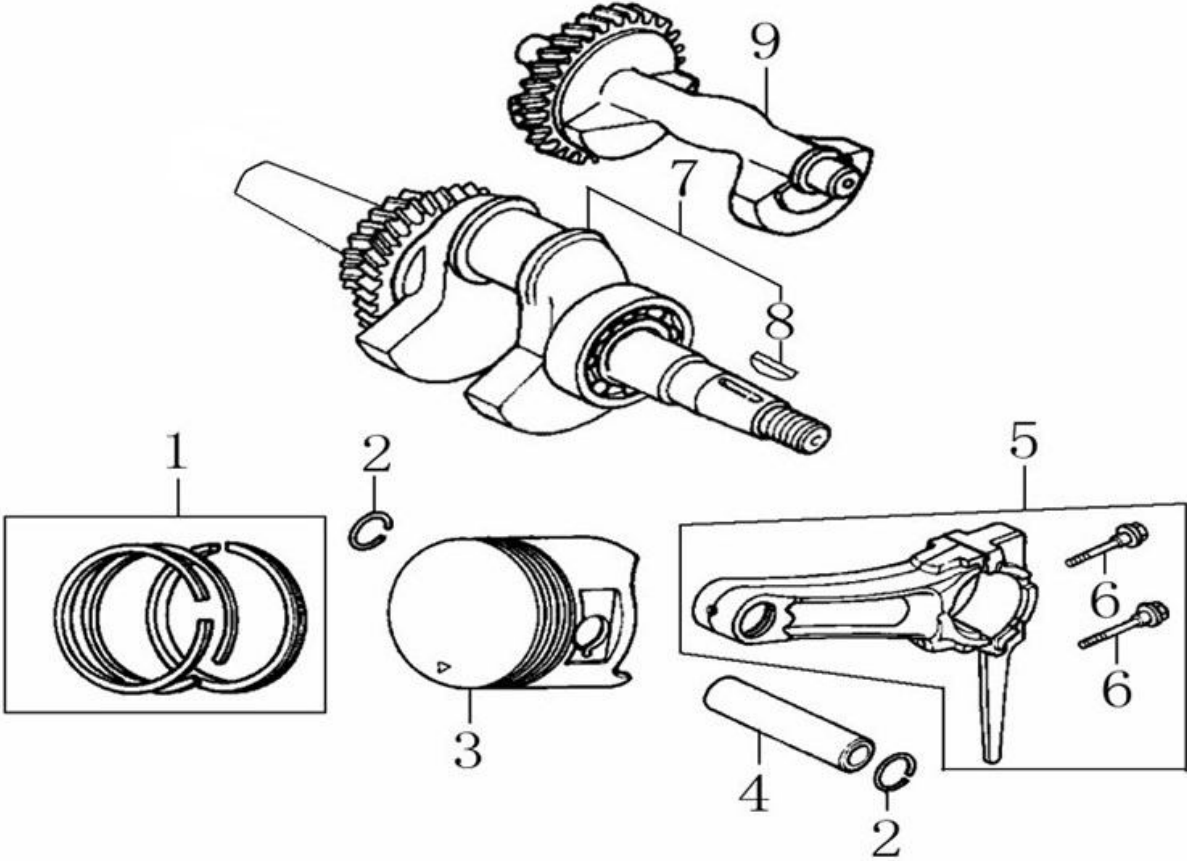

## изображение Crankshaft and piston


---

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152298	Piston ring set				
2	2	L66152299	Ring				
3	1	L66152300	Piston				
4	1	L66152301	Piston pin				
5	1	L66152302	Complete connecting rod				
6	2	L66152303	Bolt				
7	1	L66152304	Crankshaft				
8	1	L66152115	Key				
9	1	L66152305	Shaft				

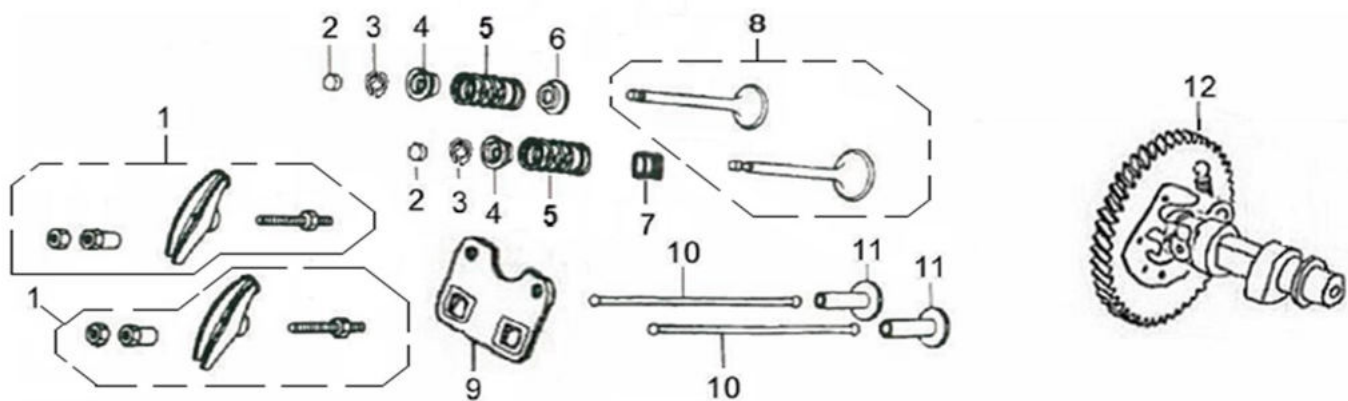

## изображение Valve train - distribution


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66152306	Compensator				
2	2	L66152307	Seal				
3	4	L66152308	Clamp				
4	2	L66152309	Spring holder				
5	2	L66152310	Valves spring				
6	1	L66152311	Slide				
7	1	L66152312	Seal				
8	1	L66152313	Valves kit				
9	1	L66152314	Balance plate				
10	2	L66152315	Equalizer rod				
11	2	L66152316	Slide				
12	1	L66152317	Camshaft assy				

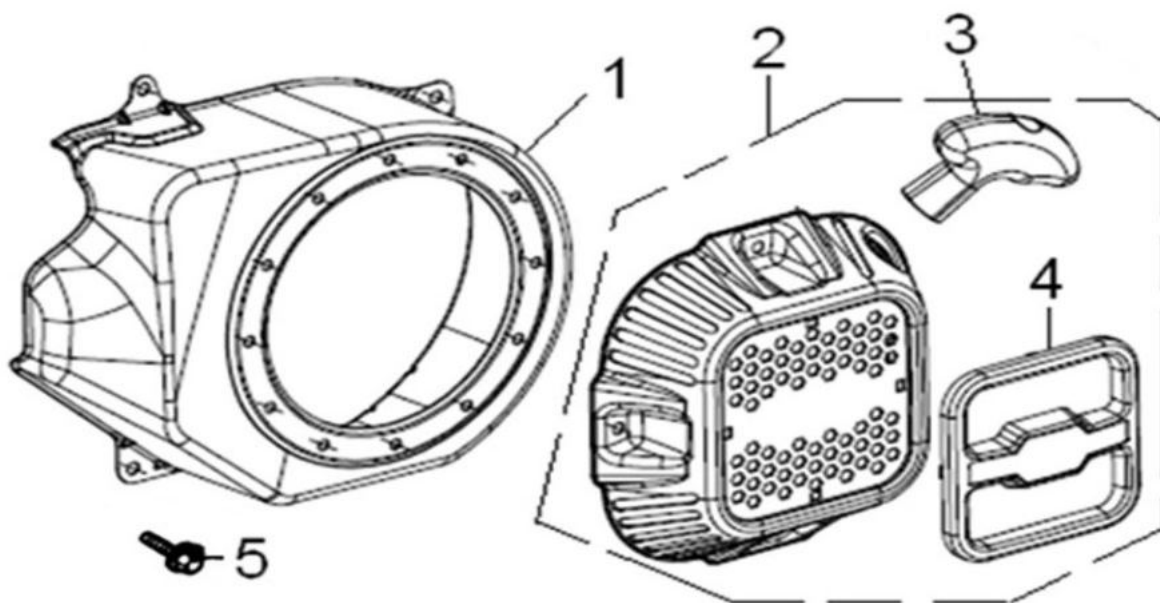

## изображение Starter assy

---

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152319	Starter case				
2	1	L66152320	Starter assy				
3	1	L66152321	Starter handle				
4	1	L66152322	Cover				
5	5	L66152247	Screw				

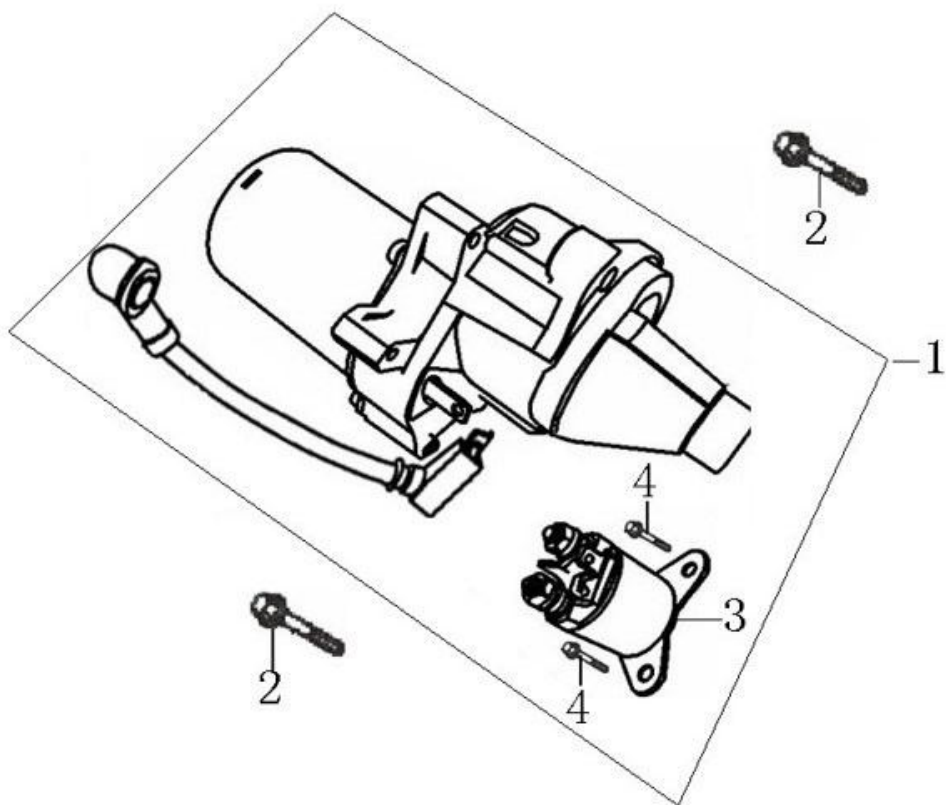




## изображение Electric starter assembly

---


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152397	Start motor assy				
2	2	L66152398	Screw				
3	1	L66152399	Relay				
4	2	L66152373	Screw				

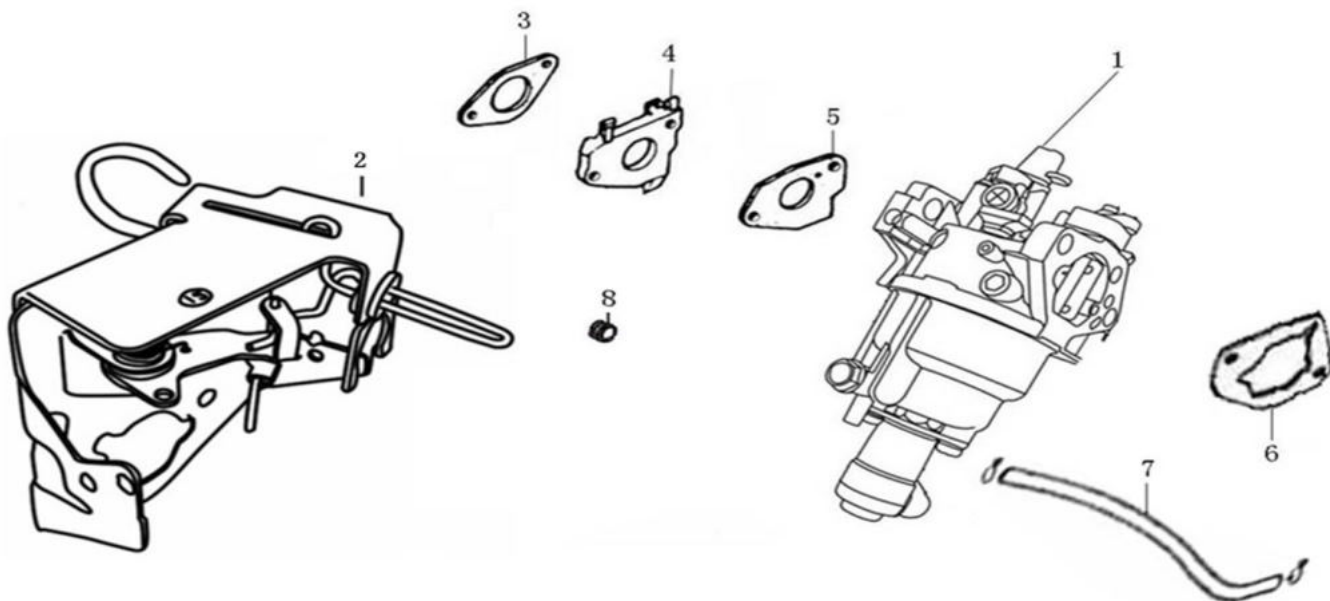

## изображение Carburetor

---


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152323	Carburetor				
2	1	L66152324	Control				
3	1	L66152325	Gasket				
4	1	L66152326	Insulator				
5	1	L66152327	Gasket				
6	1	L66152328	Gasket				
7	1	L66152329	Tube				
8	1	L66152330	Sleeve				

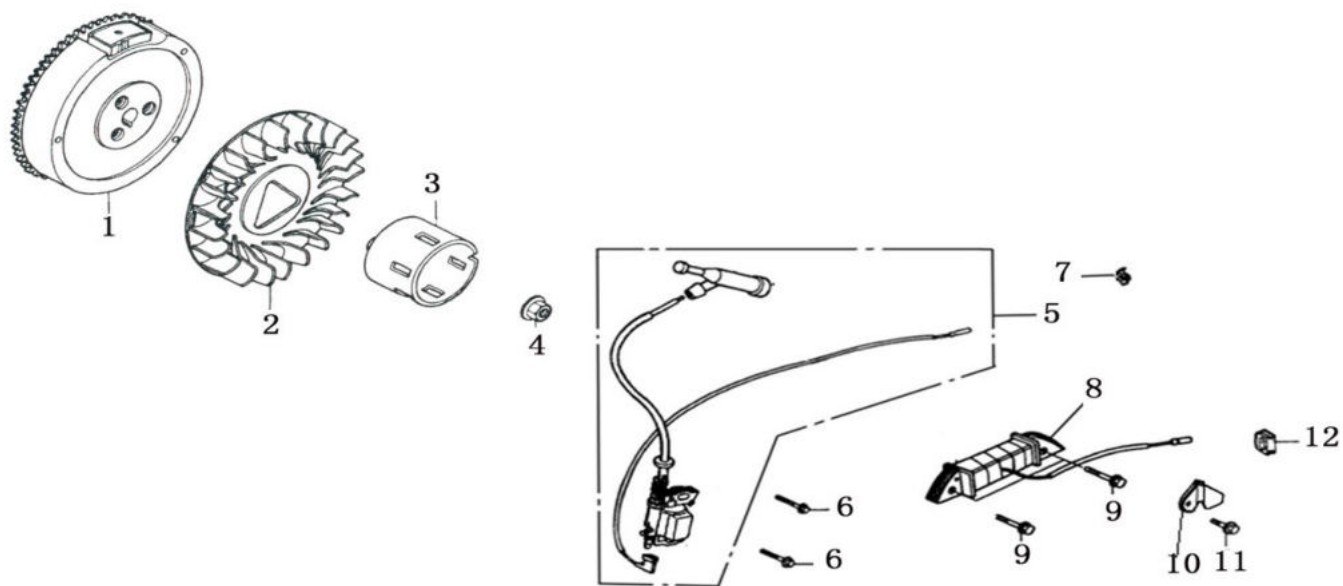

## изображение Ignition group

---


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152331	Flywheel				
2	1	L66152332	Fan				
3	1	L66152333	Pulley				
4	1	L66152334	Nut				
5	1	L66152335	Ignition coil				
6	2	L66152147	Screw				
7	1	L66152336	Fairled				
8	1	L66152337	Charging plates				
9	2	L66152338	Screw				
10	1	L66152339	Plate				
11	1	L66152247	Screw				
12	1	L66152340	Fairled				

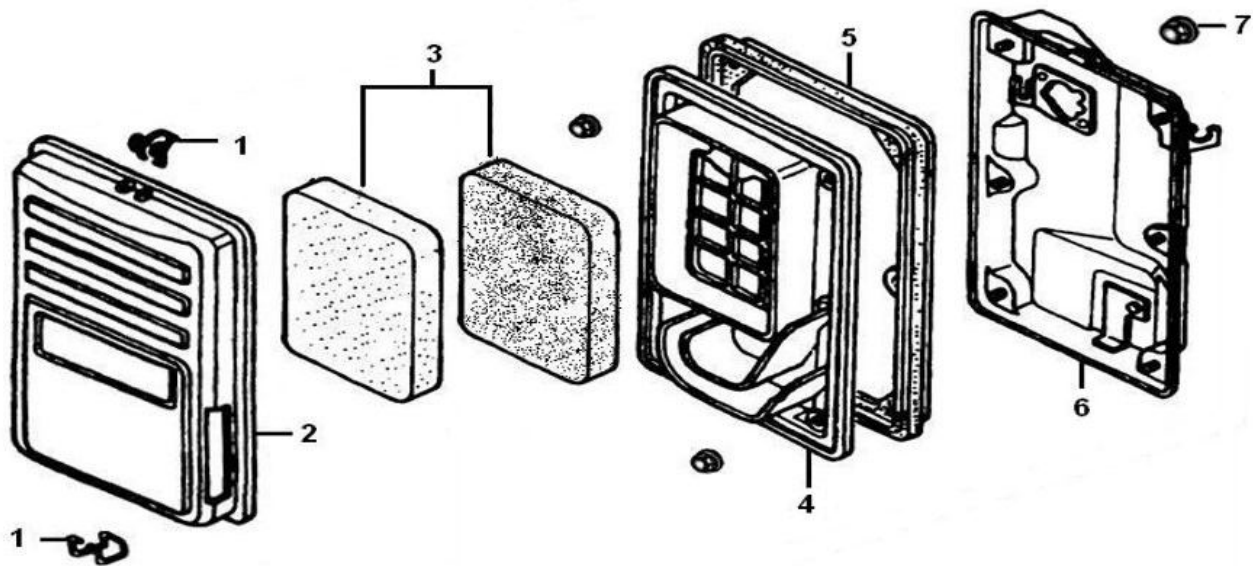

## изображение Air filter

---

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66152341	Clip				
2	1	L66152342	Filter cover				
3	1	L66152345	Air filter				
4	1	L66152346	Filter support				
5	1	L66152347	Seal ring				
6	1	L66152348	Filter support				
7	2	L66152154	Nut				

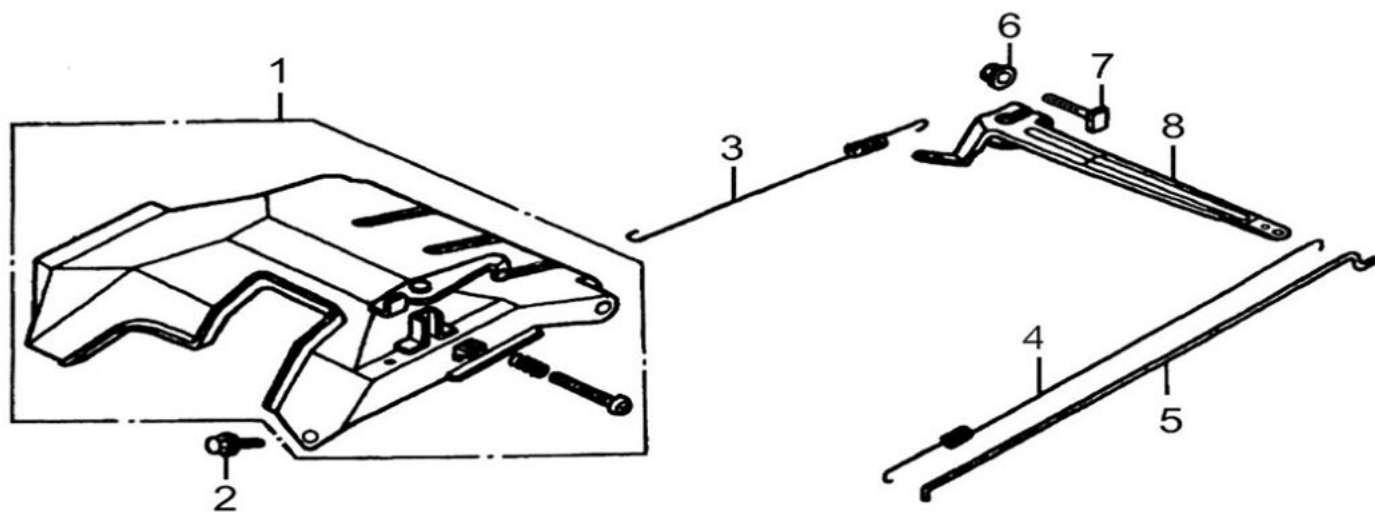




## изображение Control levers


---

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152350	Accelerator group				
2	2	L66152247	Screw				
3	1	L66152351	Spring				
4	1	L66152352	Spring				
5	1	L66152353	Throttle rod				
6	1	L66152254	Nut				
7	1	L66152152	Screw				
8	1	L66152354	Rod support				

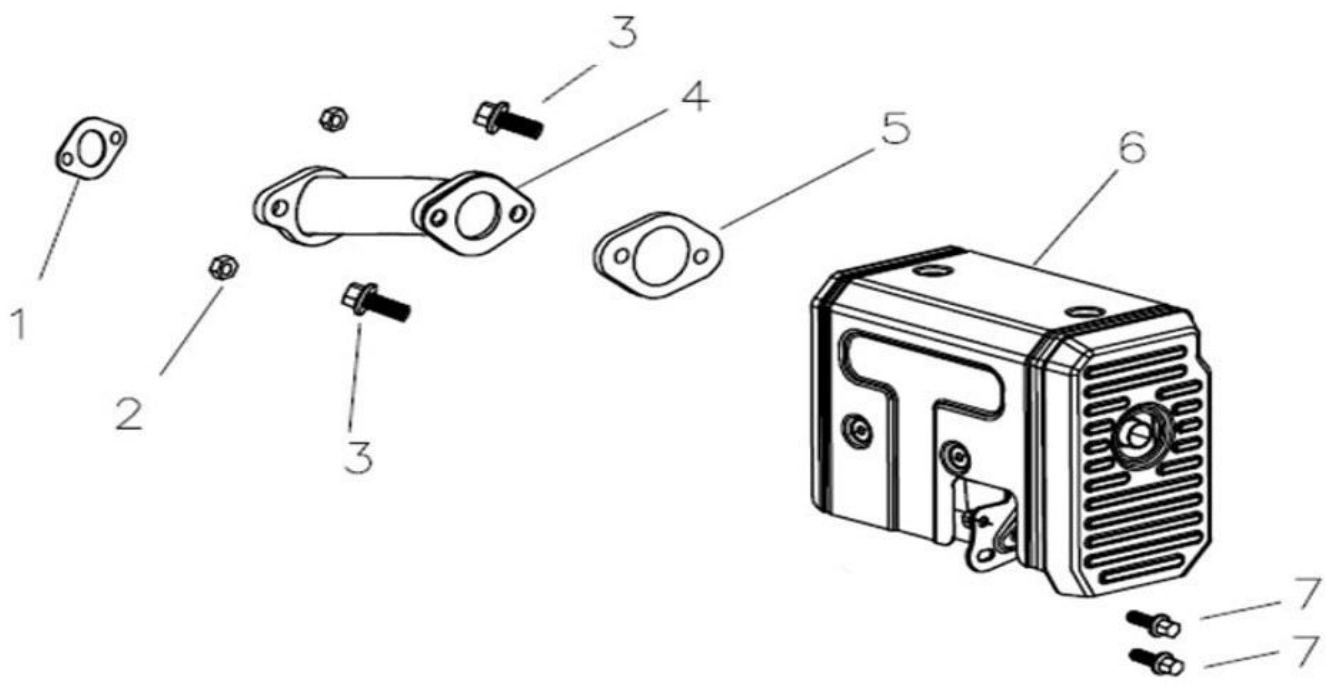

## изображение Muffler


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152355	Gasket				
2	2	L66152169	Nut				
3	2	L66152356	Screw				
4	1	L66152357	Exhaust pipe				
5	1	L66152358	Gasket				
6	2	L66152359	Screw				
7	1	L66152360	Muffler				

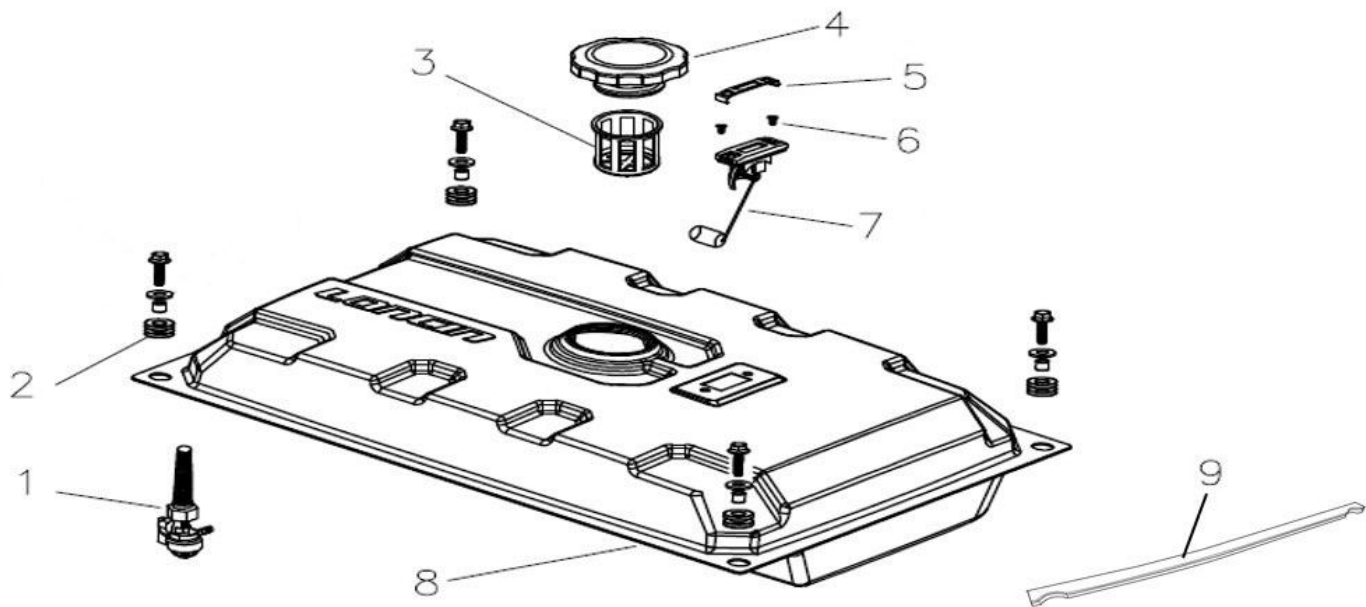

## изображение Tank

---


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152184	Tap				
2	4	L66152182	AV-mount				
3	1	L66152175	Filter				
4	1	L66152174	Tank cap				
5	1	L66152176	Clip				
6	2	L66152177	Screw				
7	1	L66152178	Oil level				
8	1	L66152361	Tank				
9	1	L66152362	AV-mount				

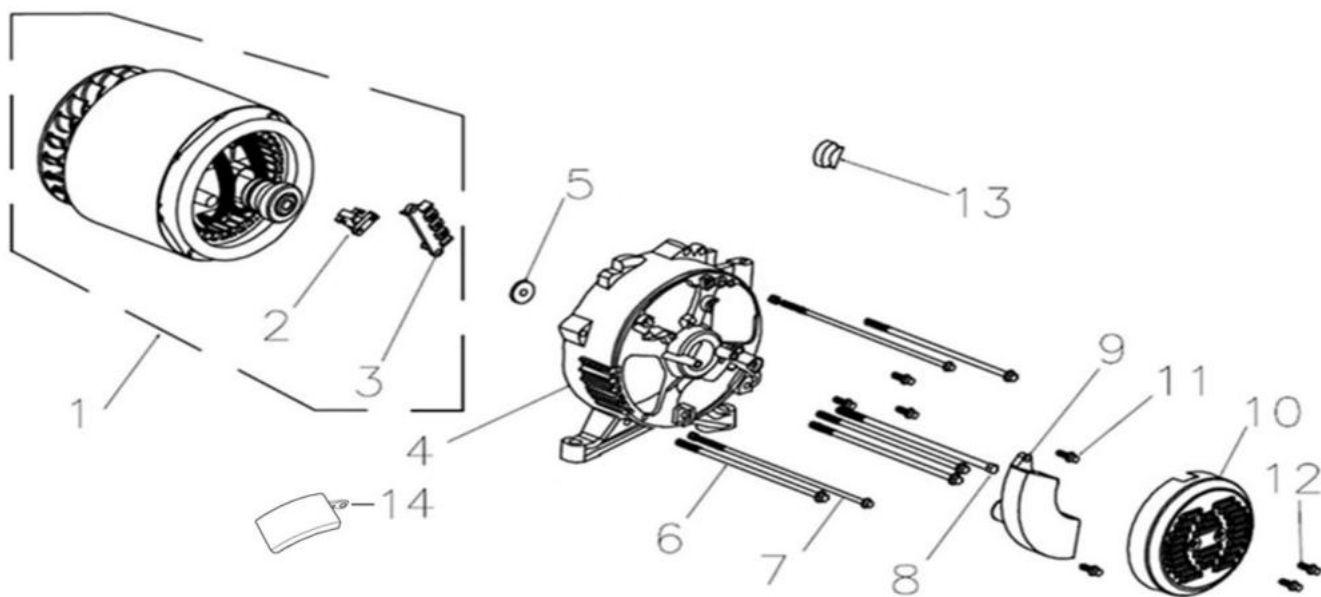

## изображение Generator group

---


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152363	Electric motor				
2	1	L66152364	Terminal plate				
3	1	L66152365	Brush				
4	1	L66152366	Engine support				
5	1	L66152367	Washer				
6	4	L66152368	Screw				
7	2	L66152369	Screw				
8	1	L66152370	Screw				
9	1	L66152371	Governor				
10	1	L66152372	Cover				
11	3	L66152373	Screw				
12	6	L66152221	Screw				
13	1	L66152374	Limiter switch				
14	1	L66152375	Cover				

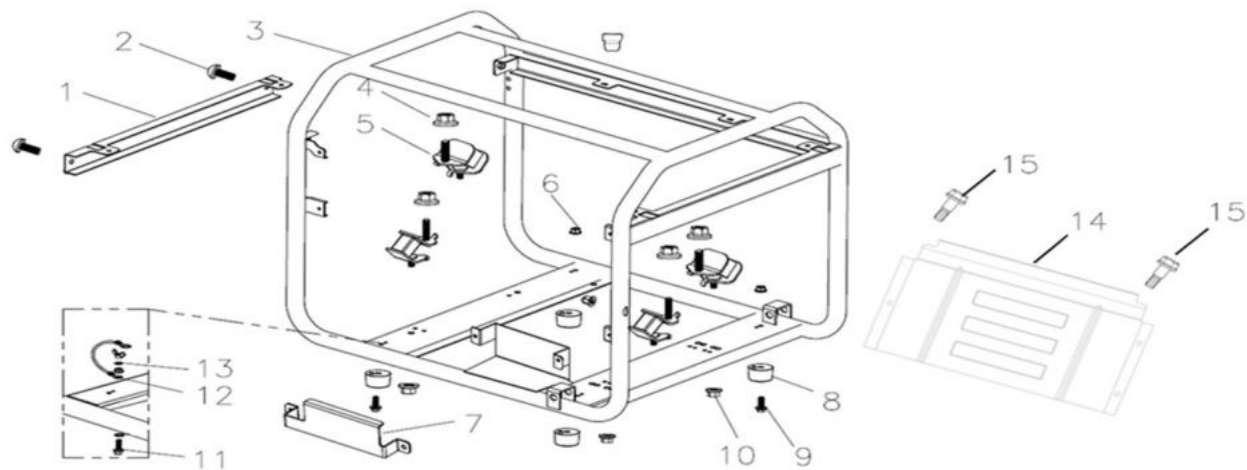





## изображение Frame

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152376	Bracket				
2	2	L66152377	Screw				
3	1	L66152378	Frame				
4	4	L66152379	Nut				
5	1	L66152380	AV-mount				
6	4	L66152154	Nut				
7	1	L66152381	Bracket				
8	1	L66152204	AV-mount				
9	3	L66152090	Screw				
10	4	L66152202	Nut				
11	1	L66152147	Screw				
12	1	L66152382	Earth cable				
13	1	L66152101	Washer				
14	1	L66152383	Guard				
15	2	L66152384	Screw				

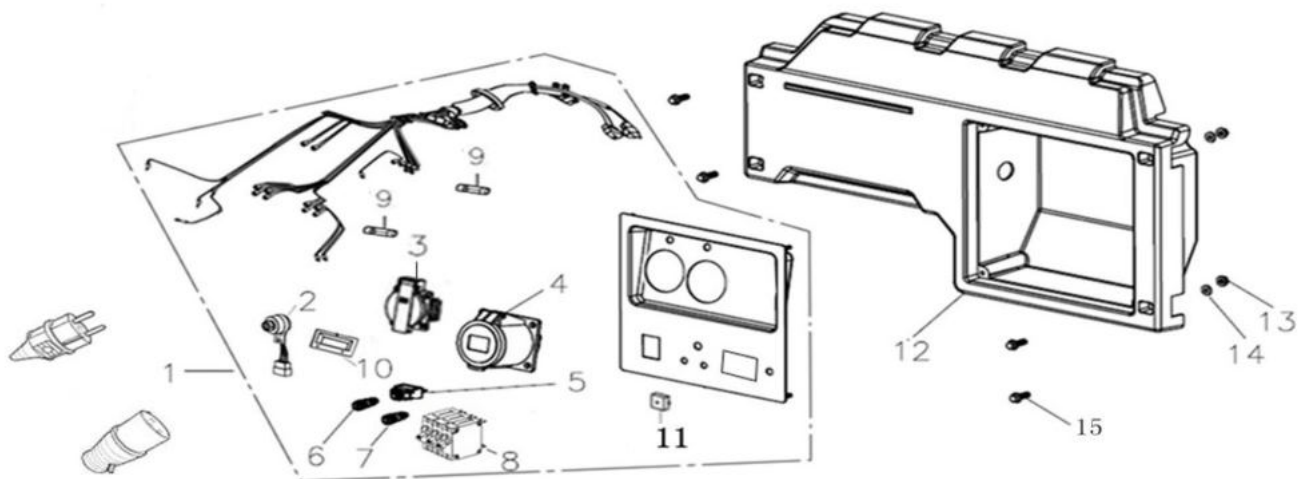

## изображение Control Panel


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152386	Control Panel				
2	1	L66152387	Starting switch				
3	1	L66152388	Plug				
4	1	L66152389	Plug				
5	1	L66152195	Electrical protection				
6	1	L66152191	Positive terminal				
7	1	L66152190	Negative terminal				
8	1	L66152390	Electrical protection				
9	2	L66152391	Fuse				
10	1	L66152392	Timer				
11	1	L66152196	Rectifier				
12	1	L66152393	Panel support				
13	4	L66152199	Nut				
14	4	L66152394	Washer				
15	4	L66152090	Screw				

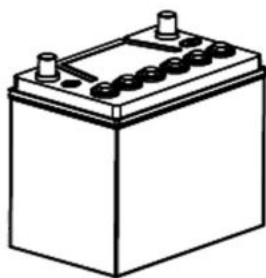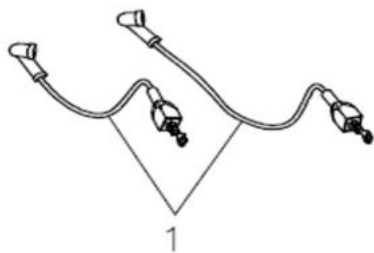

## изображение Battery

---

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66152385	Wire				
2	1	L66152381	Bracket				

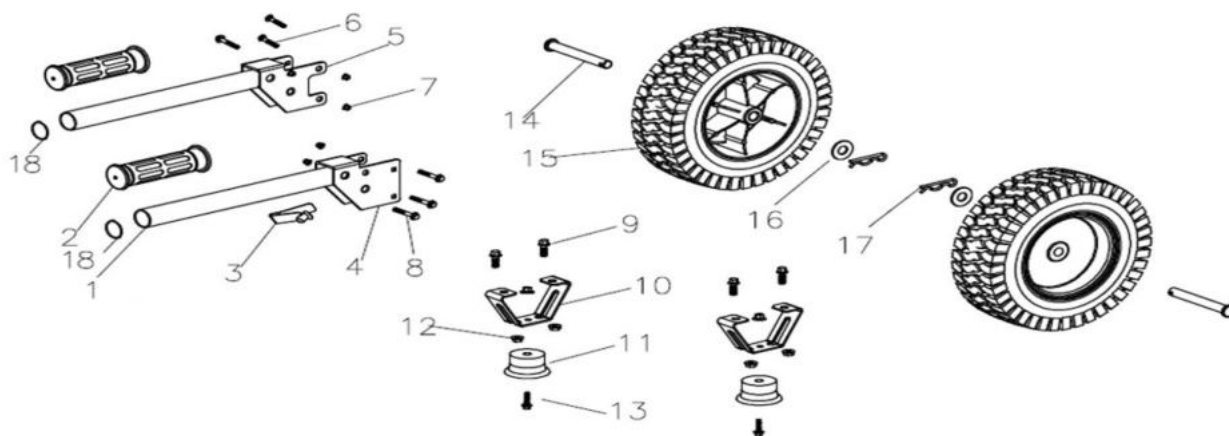

## изображение Transport wheels

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66152400	Lever				
2	2	L66152401	Rubber handle				
3	2	L66152402	Lever				
4	1	L66152403	Lever support				
5	1	L66152404	Lever support				
6	4	L66152405	Screw				
7	6	L66152406	Nut				
8	2	L66152407	Screw				
9	4	L66152090	Screw				
10	2	L66152408	Anti-vibration support				
11	2	L66152409	AV-mount				
12	4	L66152154	Nut				
13	2	L66152410	Screw				
14	2	L66152411	Pin				
15	2	L66152412	Wheel				
16	2	L66152413	Washer				
17	2	L66152414	Clip				
18	2	L66152415	Cap				