

ARTIK 72 ELDT Snow blower



Документы

Handle-bar and control box

Complete engine

Transmission assy

Snow thrower assy

Cylinder head

Cylinder and crankcase

Crankcase cover

Crankshaft and piston

Valves

Ignition system

Carburetor

Flywheel and coil

Starter lever


Control lever

Air filter

Muffler


Tank

Cover

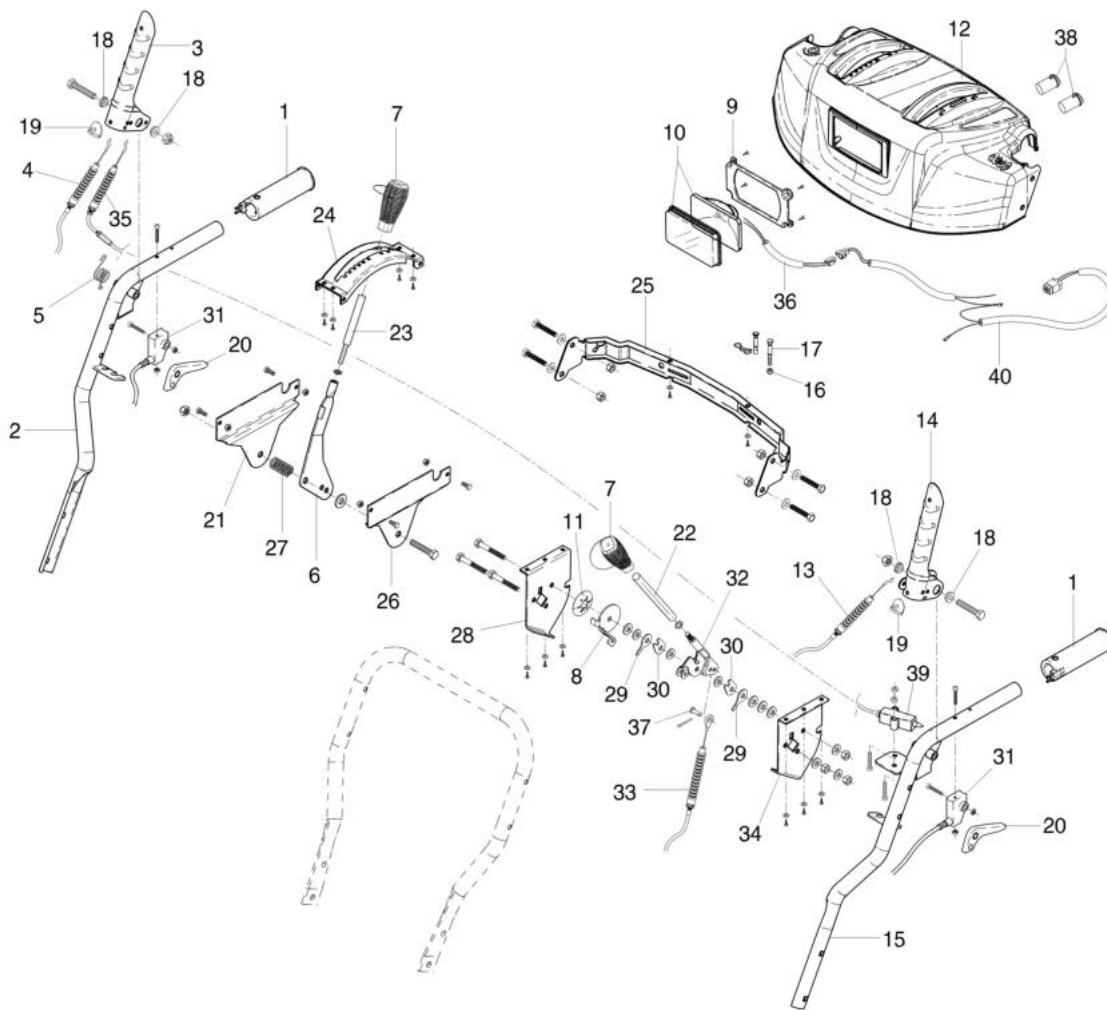


изображение Handle-bar and control box

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	ZM000121	Handle			Con sistema di riscaldamento; With heating system	
2	1	ZM000290	Handlebar			DX; RIGHT	
3	1	ZM000291	Lever			DX, comando trazione; RH, traction control	
4	1	ZM000123	Traction cable				
5	1	ZM000124	Spring				
6	1	ZM000074	Lever			Leva selezione marce; Drive	
7	2	ZM000075	Knob				
8	1	ZM000304	Main board				
9	1	ZM000079	Plate				
10	1	ZM000080	Headlamp				
11	1	ZM000081	Washer				
12	1	ZM000086	Handle cover				
13	1	ZM000126	Bowden cable				
14	1	ZM000297	Lever			SX, azionamento fresa; LH,	
15	1	ZM000299	Handlebar			SX; LEFT	
16	2	ZM000166	Self-locking nut				
17	2	ZM000090	Pin				
18	4	ZM000011	Bushing				
19	2	ZM000298	Rubber protection				
20	2	ZM000375	Lever			Leva di comando direzione;	
21	1	ZM000176	Plate right				
22	1	ZM000084	Extension (lever)				
23	1	ZM000293	Extension (lever)				
24	1	ZM000076	Plate				
25	1	ZM000295	Plate				
26	1	ZM000078	Plate left				
27	1	ZM000077	Spring				
28	1	ZM000303	Plate right				
29	1	ZM000186	Lever				
30	1	ZM000187	Lever				
31	2	ZM000376	Lever support				
32	1	ZM000085	Selector			Leva regolazione altezza	
33	1	ZM000087	Cable			Cavo regolazione altezza	
34	1	ZM000177	Plate left			getto camino; Height jet	
35	1	ZM000292	Cable			adjustable chute cable	
36	1	ZM000371	Light cable			Cavo impedimento innesto	
37	1	ZM000300	Pin			rotore; Rotor engagement	
38	1	ZM000083	Switch			safetv cable	
39	1	ZM000296	Block				
40	1	ZM000372	Wiring				

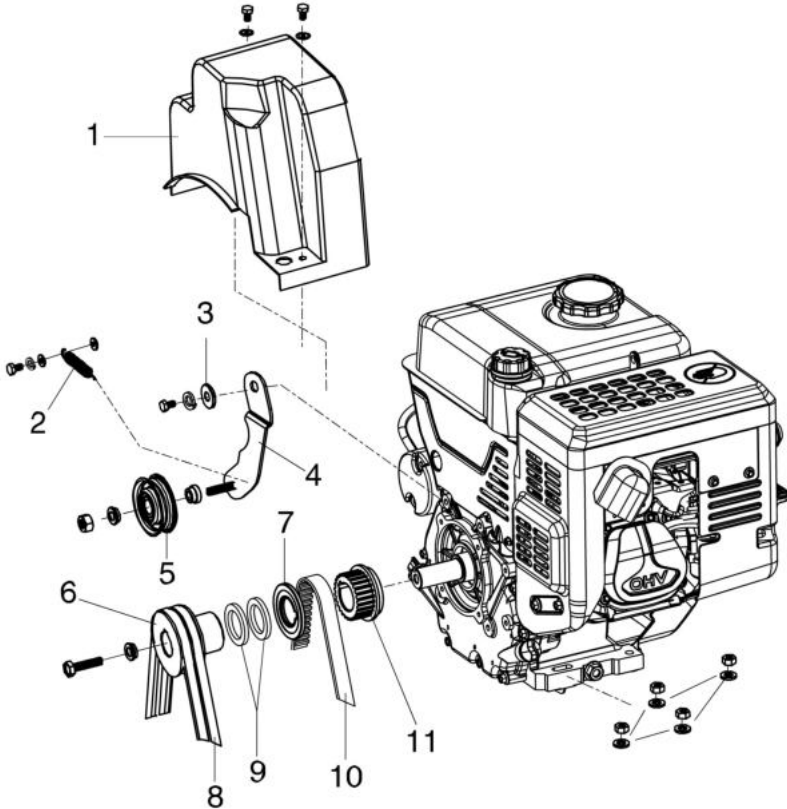

изображение Complete engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	ZM000093	Belt cover				
2	1	ZM000012	Spring				
3	1	ZM000131	Bushing				
4	1	ZM000095	Support				
5	1	ZM000013	Pulley				
6	1	ZM000305	Pulley				
7	1	ZM000307	Washer				
8	2	ZM000306	V belt			TRUFLEX G 4LXA930	
9	2	ZM000308	Washer				
10	1	ZM000097	Belt			AOLIDA HTD 825-5M ;	
11	1	ZM000096	Pulley				

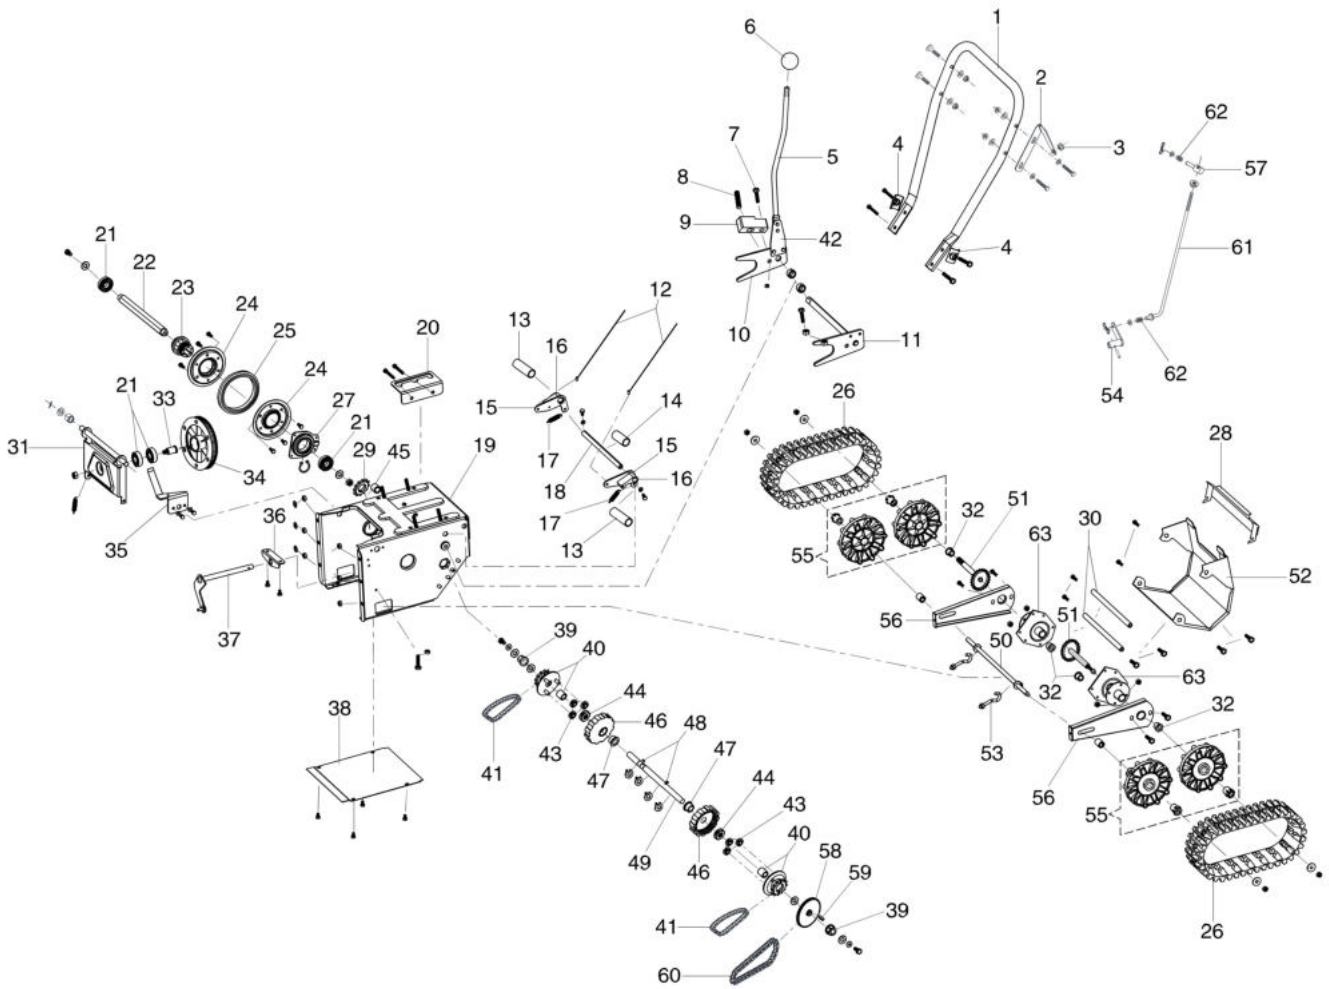


изображение Transmission assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	ZM000309	Lower handle				
2	1	ZM000310	Lever support				
3	2	ZM000311	Bush				
4	2	ZM000172	Plate				
5	1	ZM000314	Regulating lever				
6	1	ZM000313	Knob				
7	1	ZM000235	Shaft				
8	1	ZM000316	Bolt				
9	1	ZM000317	Block				
10	1	ZM000314	Regulating lever				
11	1	ZM000320	Fork				
12	2	ZM000352	Clutch cable				
13	2	ZM000346	Bushing				
14	1	ZM000354	Bushing				
15	2	ZM000321	Spike				
16	2	ZM000349	Spike				
17	2	ZM000329	Spring				
18	1	ZM000315	Shaft				
19	1	ZM000348	Gear case assy				
20	1	ZM000355	Main board				
21	4	ZM000020	Bearing				
22	1	ZM000353	Shaft				
23	1	ZM000022	Wheel				
24	1	ZM000024	Flange				
25	1	ZM000023	Rubber ring				
26	2	ZM000322	Track				
27	1	ZM000101	Cover				
28	1	ZM000331	Plate				
29	1	ZM000139	Chain sprocket				
30	2	ZM000330	Support (wheel)				
31	1	ZM000189	Bracket support				
32	4	ZM000357	Bushing				
33	1	ZM000028	Shaft				
34	1	ZM000029	Flywheel				
35	1	ZM000350	Plate (guide)				
36	1	ZM000211	Plate				
37	1	ZM000351	Shaft				
38	1	ZM000347	Plate				
39	2	68260006R	Bushing				
40	2	ZM000338	Flange			Completa di boccola;	
41	2	ZM000335	Chain				
42	1	ZM000314	Regulating lever				
43	6	ZM000341	Gear				
44	2	ZM000340	Gear				

изображение Transmission assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	1	ZM000358	Bushing				
46	2	ZM000342	Cover (wheel)				
47	2	ZM000343R	Bushing				
48	2	ZM000345	Key				
49	1	ZM000344	Shaft				
50	1	ZM000327	Shaft				
51	2	ZM000325	Chain sprocket				
52	1	ZM000332	Cover				
53	2	ZM000328	Hook				
54	1	ZM000134	Pin (lever)				
55	4	ZM000323	Wheel kit			Ruote ant.+post; Front+rear wheels	
56	2	ZM000324	Side frame				
57	1	ZM000185	Adjuster nut				
58	1	ZM000334	Chain sprocket				
59	1	ZM000333	Key				
60	1	ZM000336	Chain				
61	1	ZM000312	Rod				
62	1	ZM000092	Spring				
63	2	ZM000326	Wheel shaft bearing				

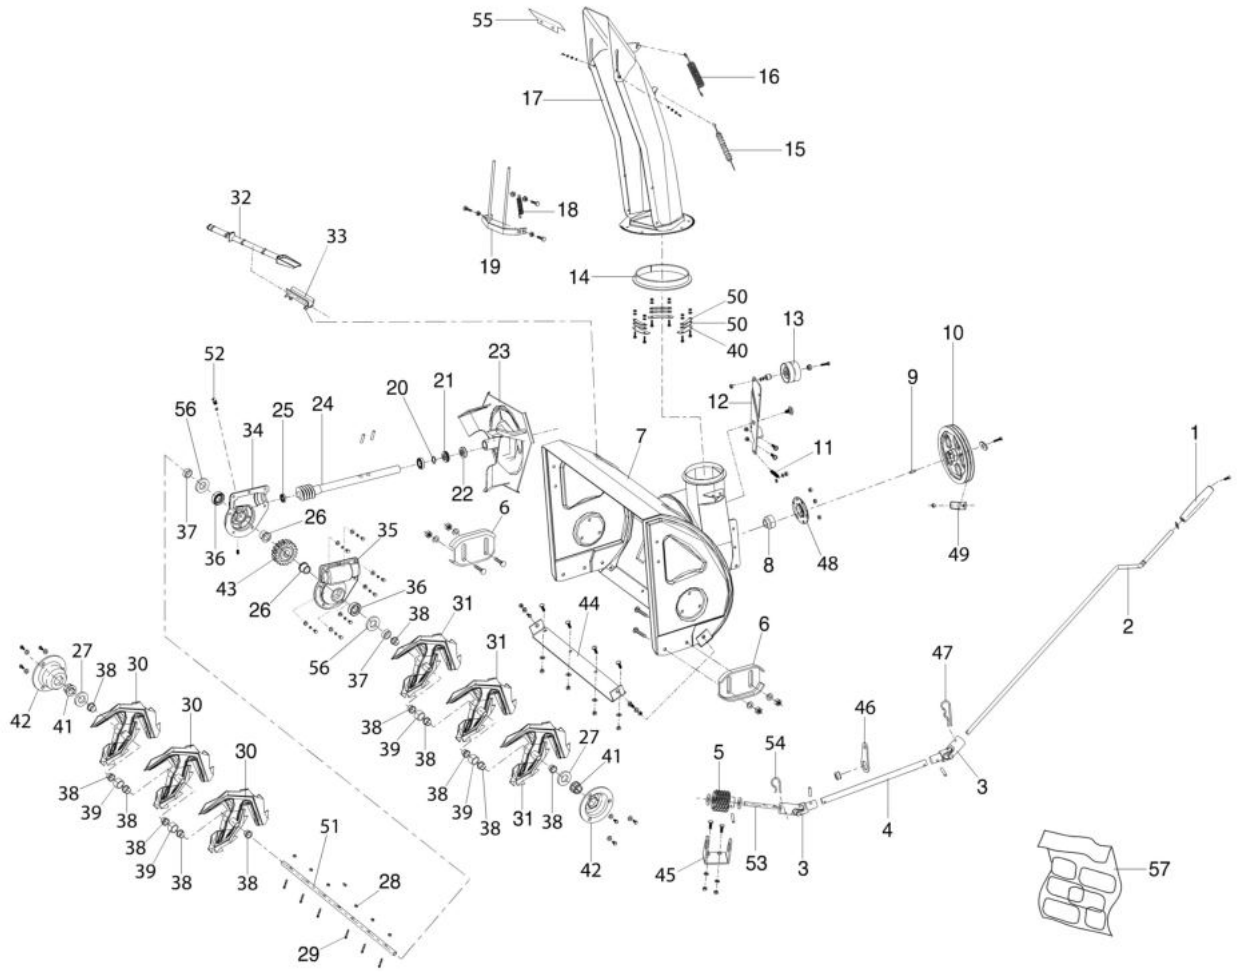


изображение Snow thrower assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	ZM000149	Knob				
2	1	ZM000150	Rod				
3	2	ZM000151	Cardan				
4	1	ZM000359	Tube				
5	1	ZM000153	Worm gear				
6	2	ZM000047	Sliding block				
7	1	ZM000363	Hood				
8	1	ZM000155	Bearing				
9	1	ZM000156	Key				
10	1	ZM000157	Pulley				
11	1	ZM000039	Spring				
12	1	ZM000364	Main board				
13	1	ZM000035	Pulley				
14	1	ZM000159	Foot socket				
15	1	ZM000087	Cable				
16	1	ZM000112	Spring				
17	1	ZM000365	Snow chute				
18	1	ZM000065	Spring				
19	1	ZM000066	Bracket				
20	1	ZM000162	Spacer				
21	1	ZM000051	Bearing				
22	2	ZM000163	Seal ring				
23	1	ZM000049R	Fan				
24	1	ZM000164	Shaft				
25	1	ZM000054	Bearing				
26	2	ZM000161	Bushing				
27	2	ZM000229	Washer				
28	6	ZM000166	Self-locking nut				
29	6	ZM000090	Pin				
30	3	ZM000059R	Tiller sx				
31	3	ZM000056R	Tiller dx				
32	1	ZM000168	Shovel				
33	1	ZM000169	Shovel support				
34	1	ZM000219	Cover dx				
35	1	ZM000220	Cover sx				
36	2	ZM000116	Gasket				
37	2	ZM000230	Spacer				
38	12	ZM000114	Guard cap				
39	4	ZM000231	Spacer				
40	3	ZM000062	Plate				
41	2	ZM000060	Bushing				
42	2	ZM000061	Cover				
43	1	ZM000117R	Gear				
44	1	ZM000226	Plate				

изображение Snow thrower assy


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	1	ZM000227	Countershaft support				
46	1	ZM000225	Tube support				
47	1	ZM000223	Cotter pin				
48	1	ZM000042	Cover				
49	1	ZM000157	Pulley				
50	6	ZM000063	Plate				
51	1	ZM000228	Shaft				
52	1	ZM000222	Nipple				
53	1	ZM000360	Shaft				
54	1	ZM000362	Cotter pin				
55	1	ZM000361	Gasket				
56	2	ZM000366	Washer				
57	1	ZM000391	Labels kit				

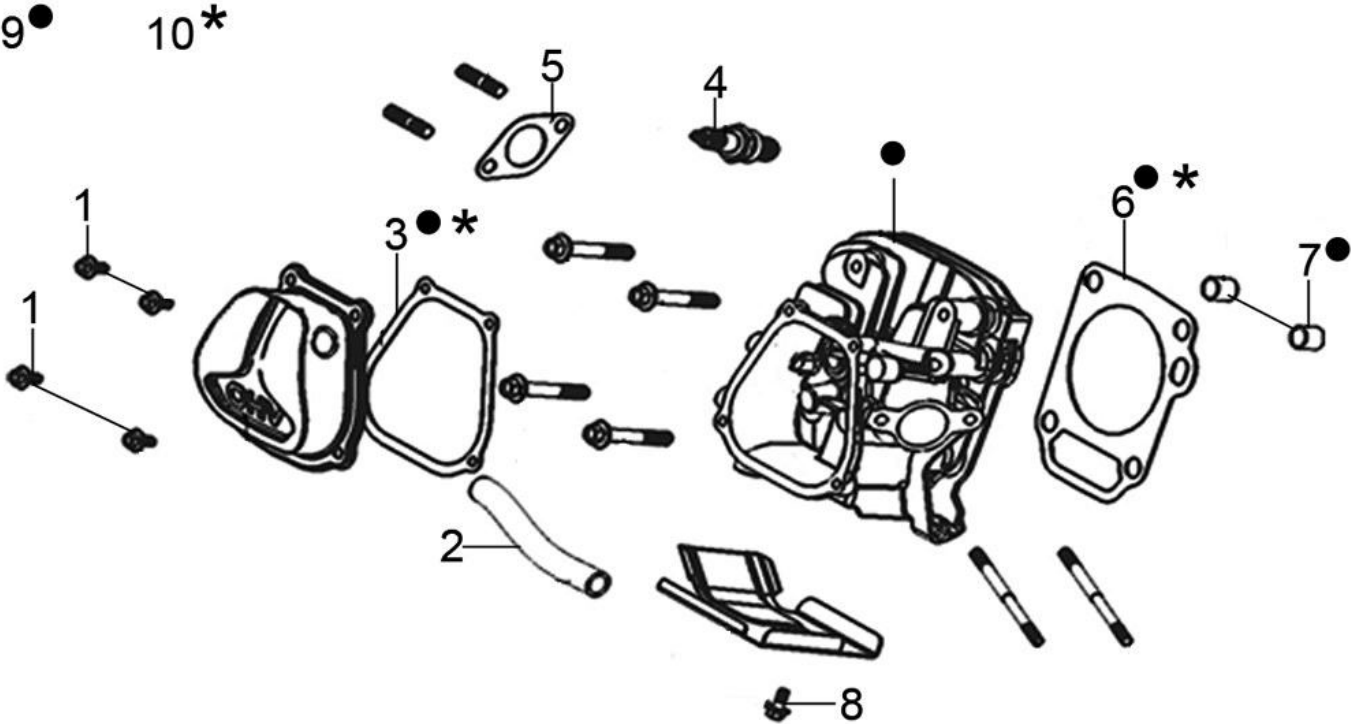

изображение Cylinder head


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	4	L66150414	Screw				
2	1	L66150530	Tube				
3	1	L66150531	Gasket				
4	1	3055123R	Spark plug				
5	1	L66150532	Gasket				
6	1	L66150653	Gasket				
7	2	L66150654	Pin				
8	1	L66150316	Screw				
9	1	L66150655	Head comp.cylinder				
10	1	L66150656	Gasket set				

12*

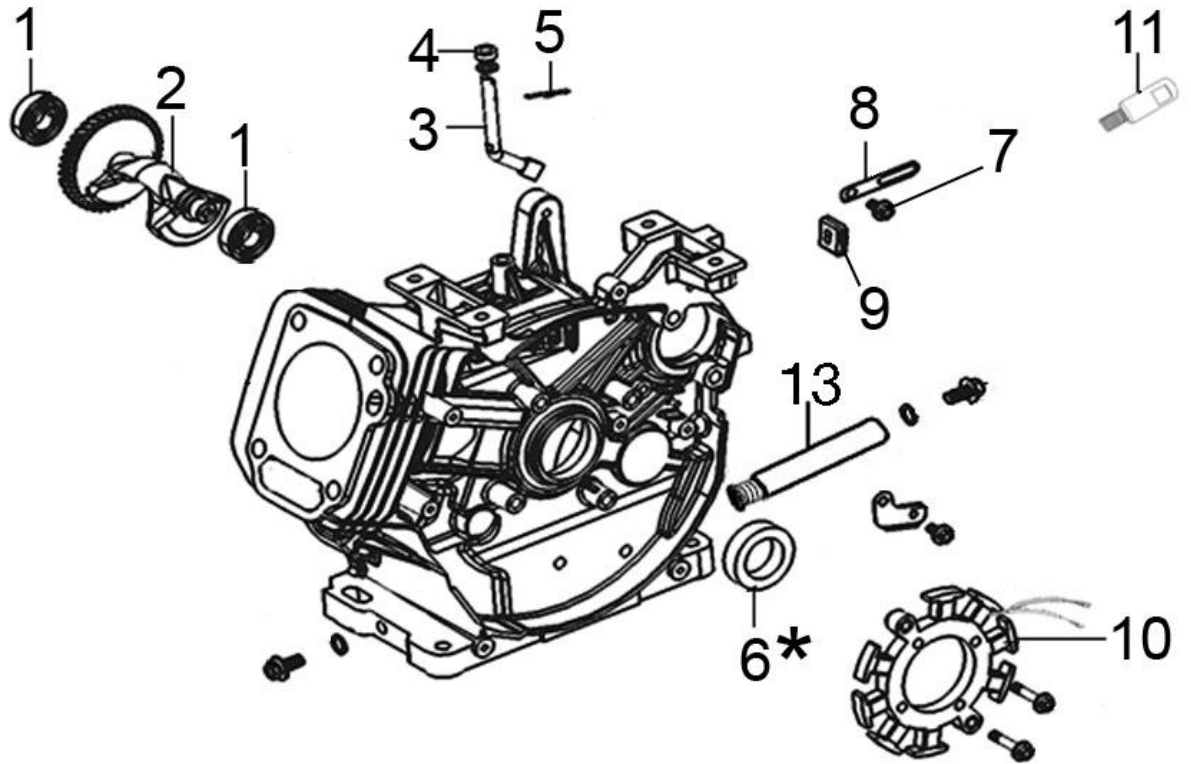



изображение Cylinder and crankcase

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66150657	Bearing				
2	1	L66150658	Compensator				
3	1	L66150659	Shaft				
4	1	L66150660	Oil seal				
5	1	L66150353	Plug				
6	1	L66150661	Oil seal				
7	1	L66150316	Screw				
8	1	L66150480	Cable				
9	1	L66150537	Clip				
10	1	L66150591	Ignition coil				
11	1	L66150539	Tube				
12	1	L66150656	Gasket set				
13	1	L66150699	Extension hose			Lungo; Long	

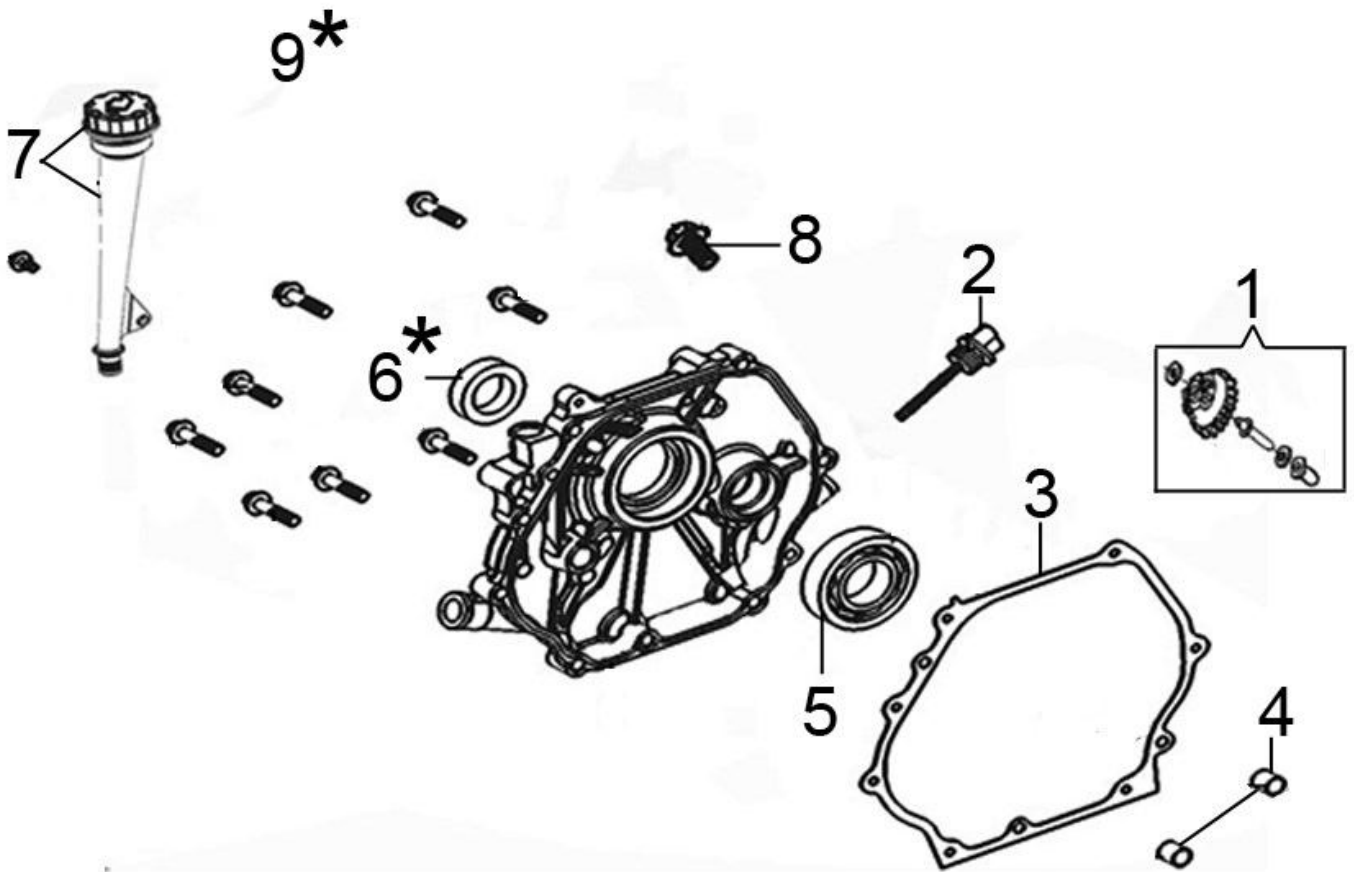


изображение Crankcase cover

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150662	Governor				
2	1	L66150541	Complete cap				
3	1	L66150663	Gasket				
4	2	L66150664	Pin				
5	1	L66150665	Bearing				
6	1	L66150666	Oil seal				
7	1	L66150667	Complete cap				
8	1	L66150352	Screw				
9	1	L66150656	Gasket set				

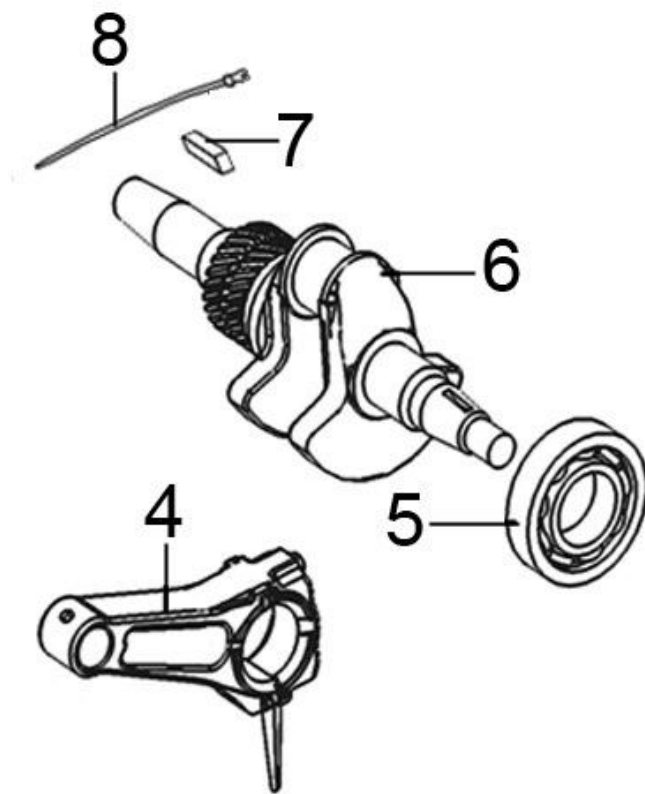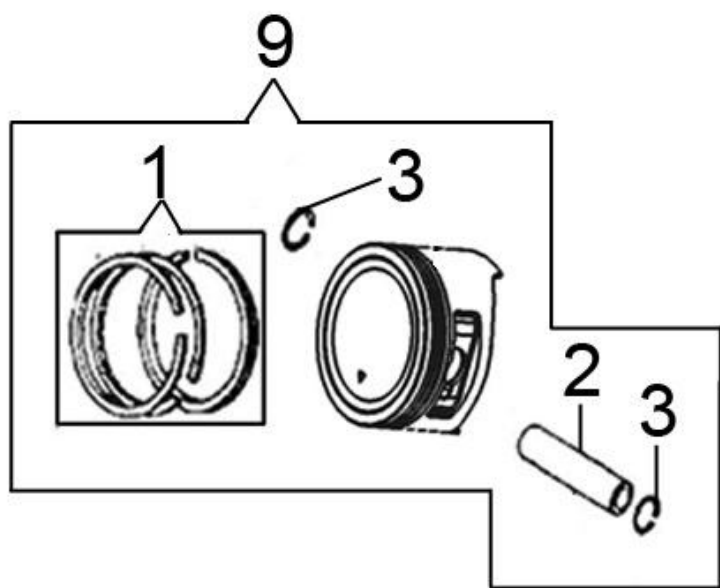


изображение Crankshaft and piston

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150668	Piston ring set				
2	1	L66150693	Piston pin				
3	2	L66150669	Ring				
4	1	L66150670	Connecting rod cpl.				
5	1	L66150665	Bearing				
6	1	L66150671	Shaft				
7	1	L66150594	Key				
8	1	L66150551	Band				
9	1	L66150672	Piston assy				

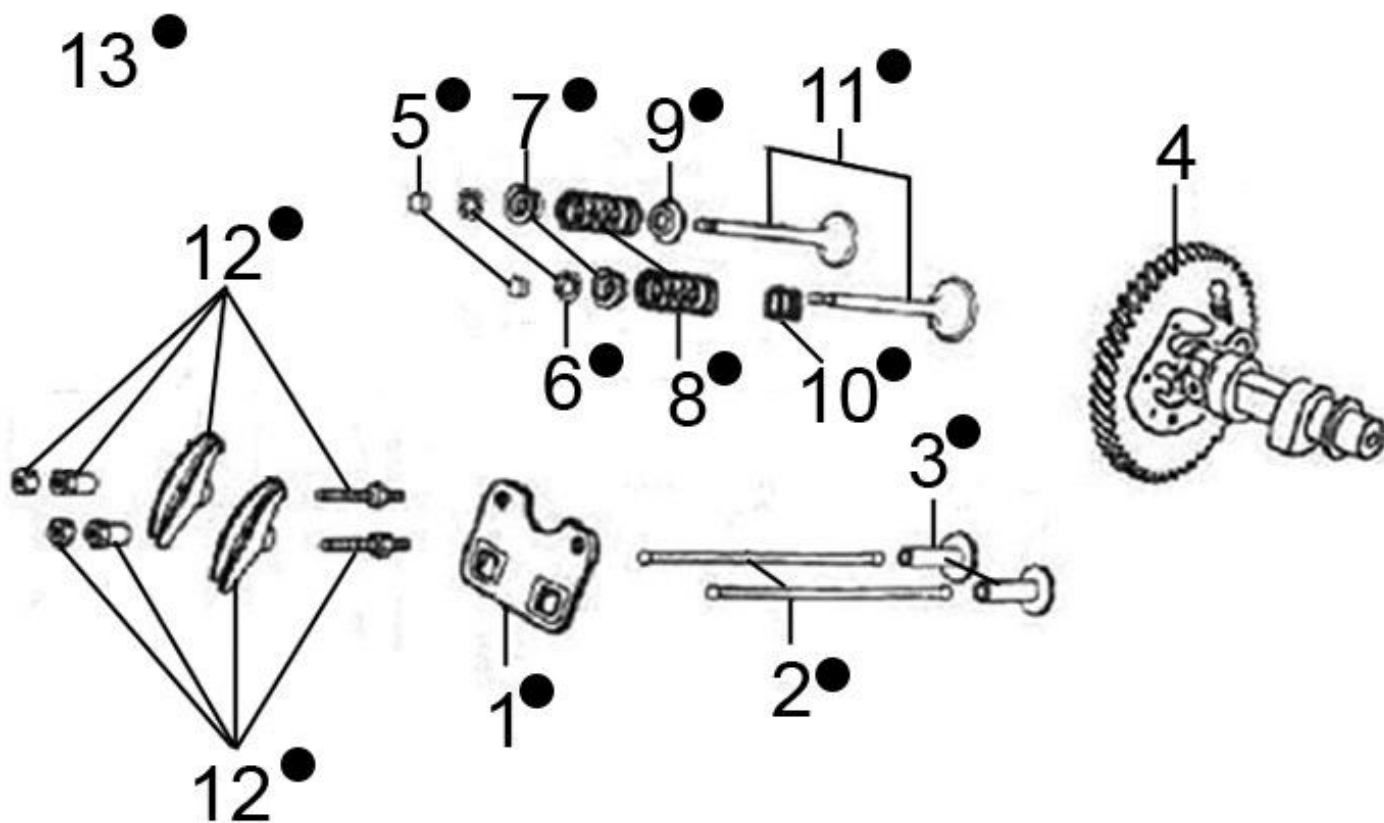


изображение Valves

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150552	Plate				
2	2	L66150673	Equalizer rod				
3	2	L66150554	Slide				
4	1	L66150674	Camshaft assy				
5	2	L66150556	Valve				
6	4	L66150557	Valve				
7	2	L66150558	Clamp				
8	2	L66150559	Spring				
9	1	L66150560	Slide				
10	1	L66150561	Seal ring				
11	1	L66150675	Valve				
12	1	L66150563	Compensator				
13	1	L66150655	Head comp.cylinder				

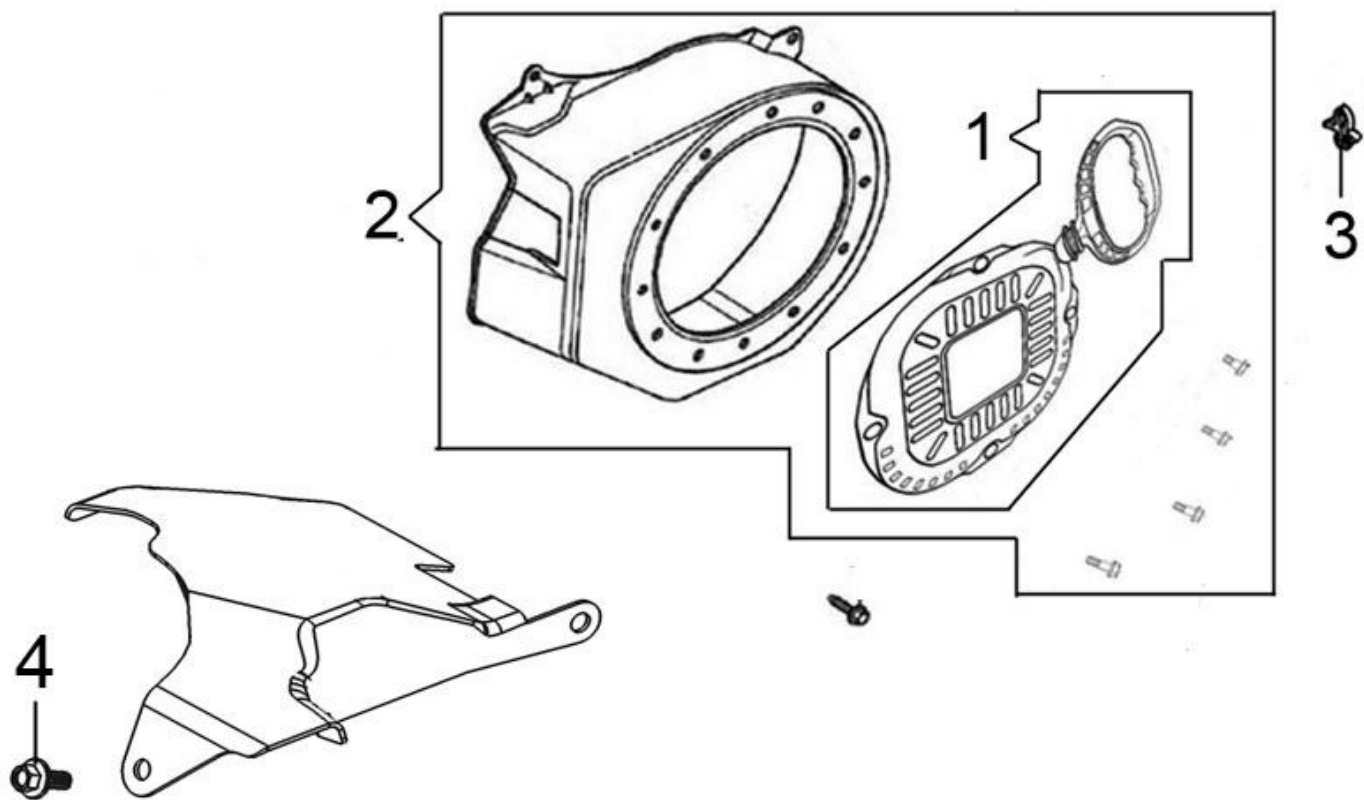


изображение Ignition system

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150676	Starter assy				
2	1	L66150677	Starter assy				
3	1	L66150566	Clip				
4	1	L66150316	Screw				

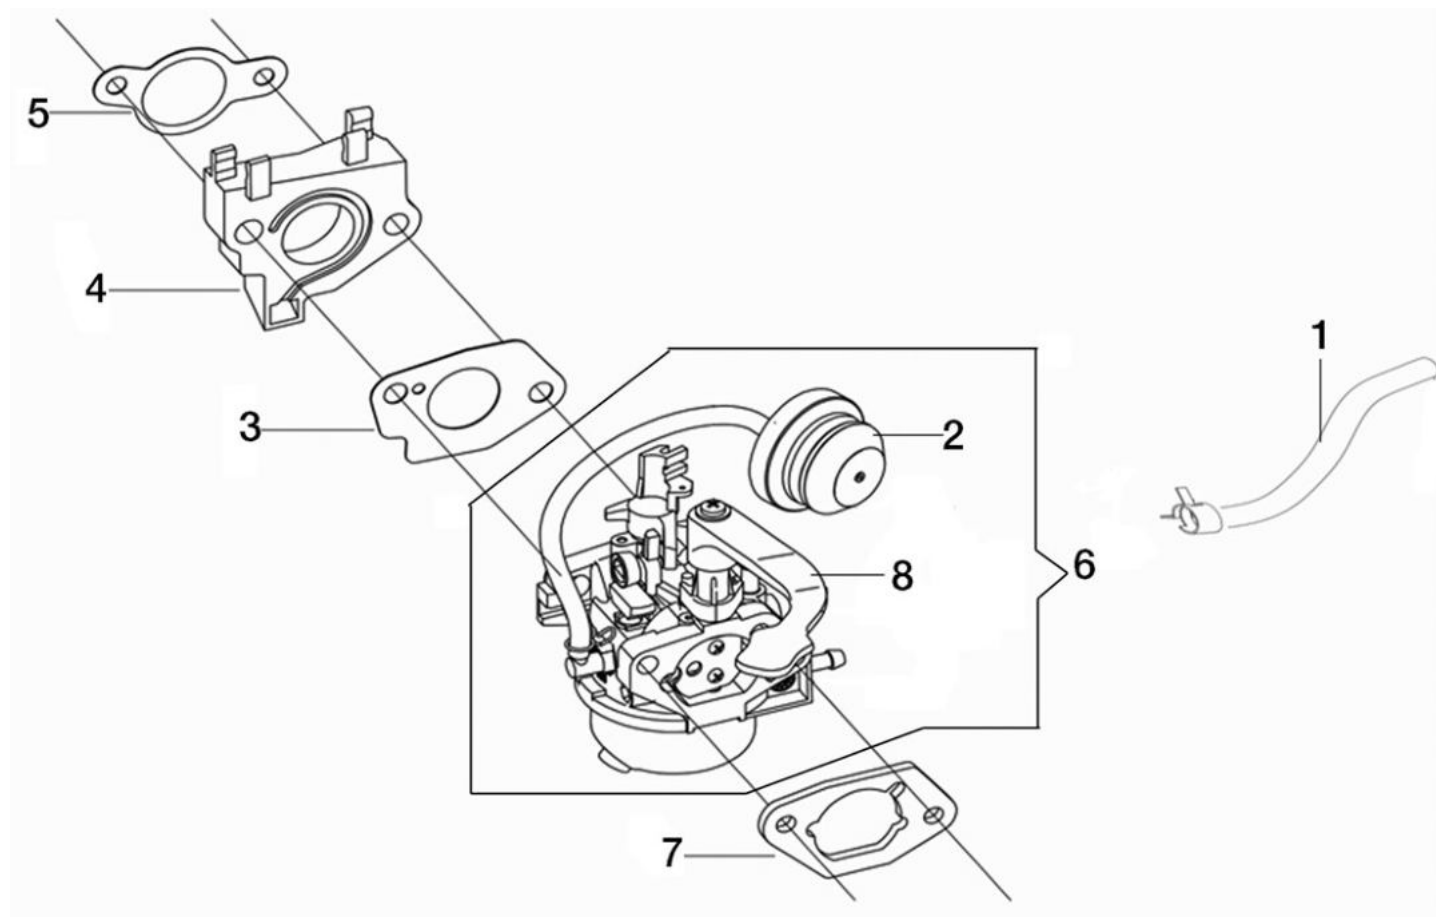


изображение Carburetor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150570	Tube				
2	1	L66150702	Primer pump				
3	1	L66150681	Gasket				
4	1	L66150682	Gasket				
5	1	L66150683	Gasket				
6	1	L66150684	Carburetor				
7	1	L66150575	Spacer				
8	1	L66150696	Air lever				

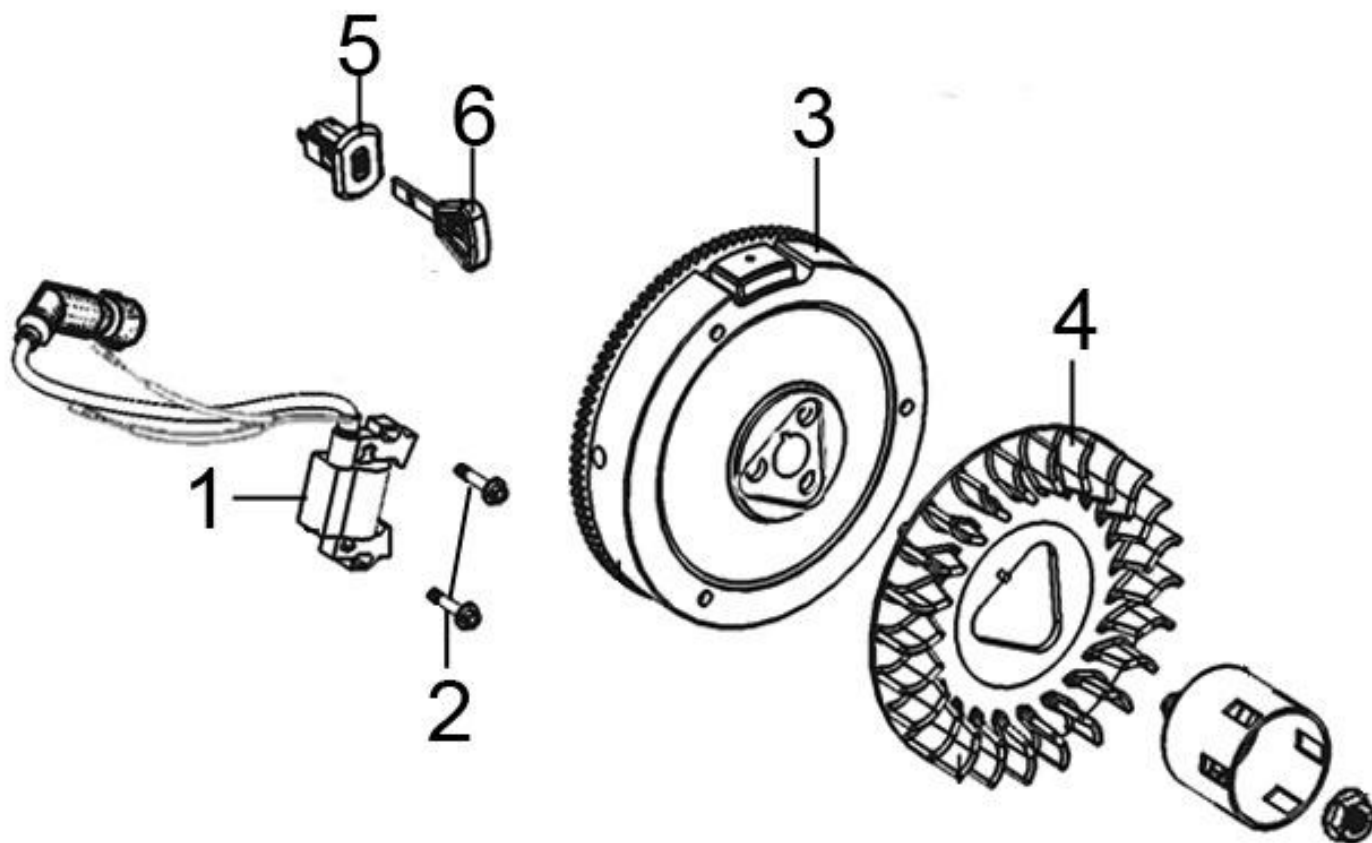


изображение Flywheel and coil

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150678	Ignition coil				
2	2	L66150321	Screw				
3	1	L66150679	Flywheel				
4	1	L66150680	Fan				
5	1	L66150492	Case				
6	1	L66150493	Switch				

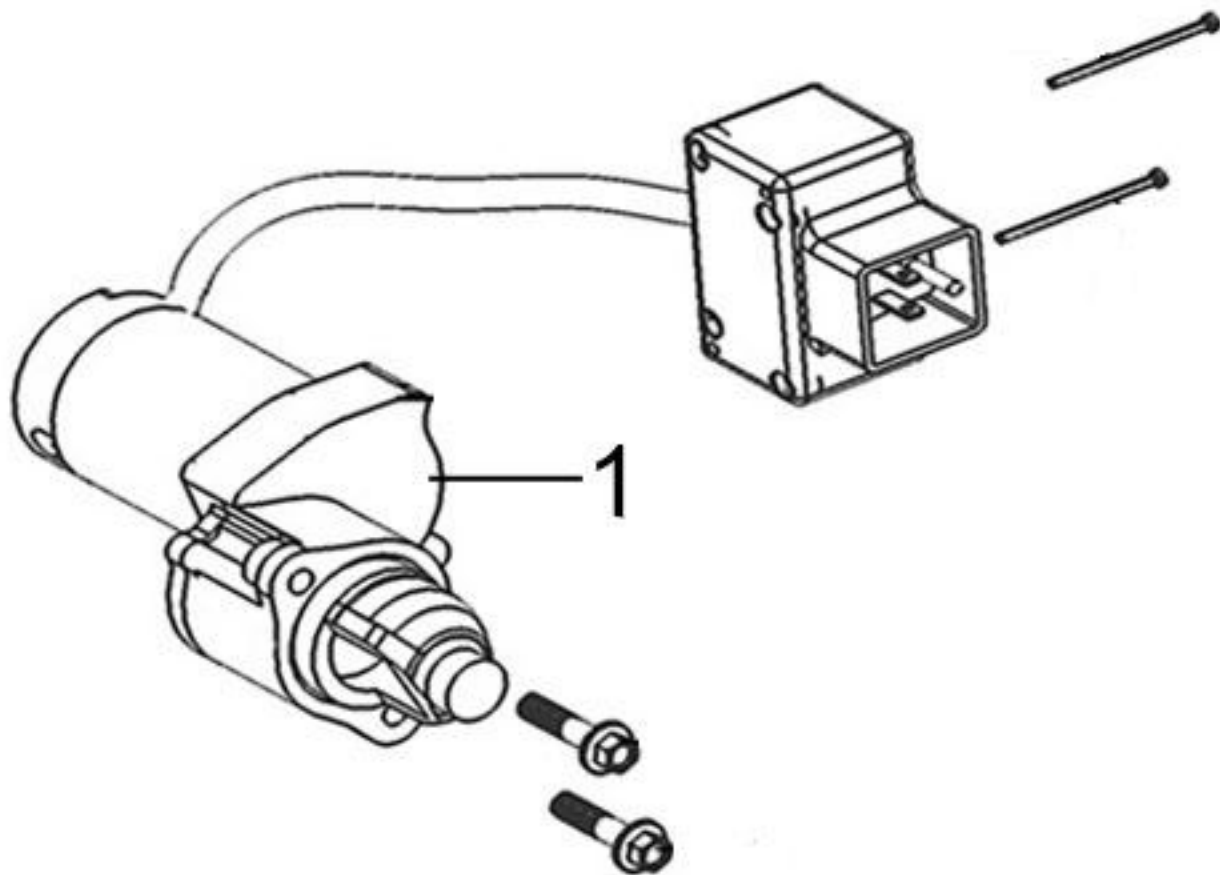


изображение Starter lever

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150685	Starter lever				

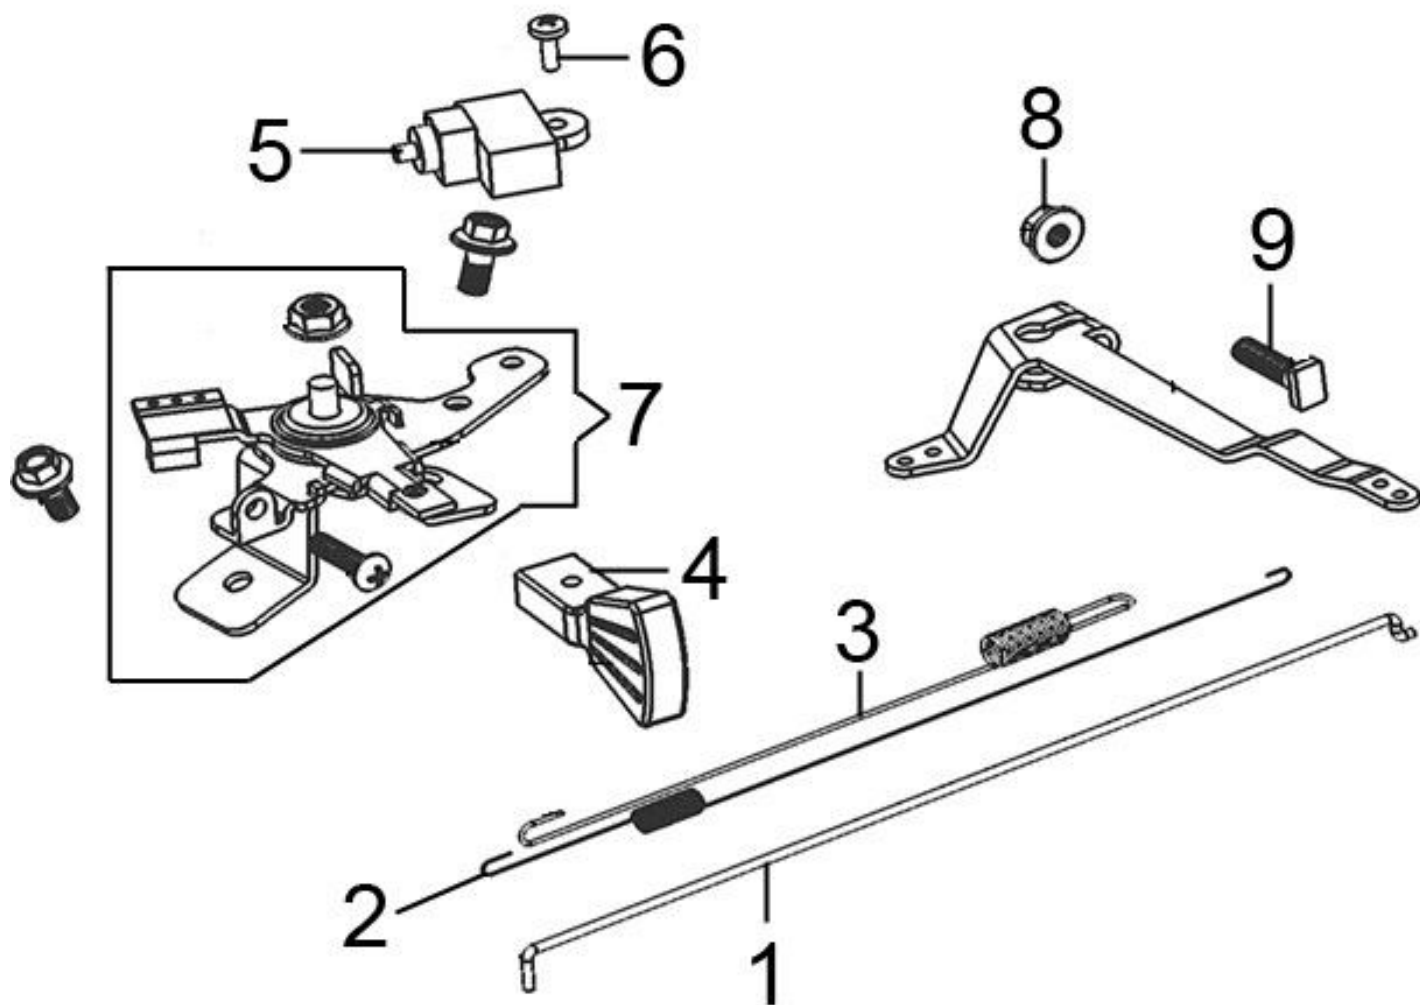


изображение Control lever

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150686	Rod				
2	1	L66150578	Spring				
3	1	L66150687	Spring				
4	1	L66150499	Rubber protection				
5	1	L66150497	Switch (stop)				
6	1	L66150240	Screw				
7	1	L66150688	Complete lever				
8	1	L66150185	Nut				
9	1	L66150382	Screw				

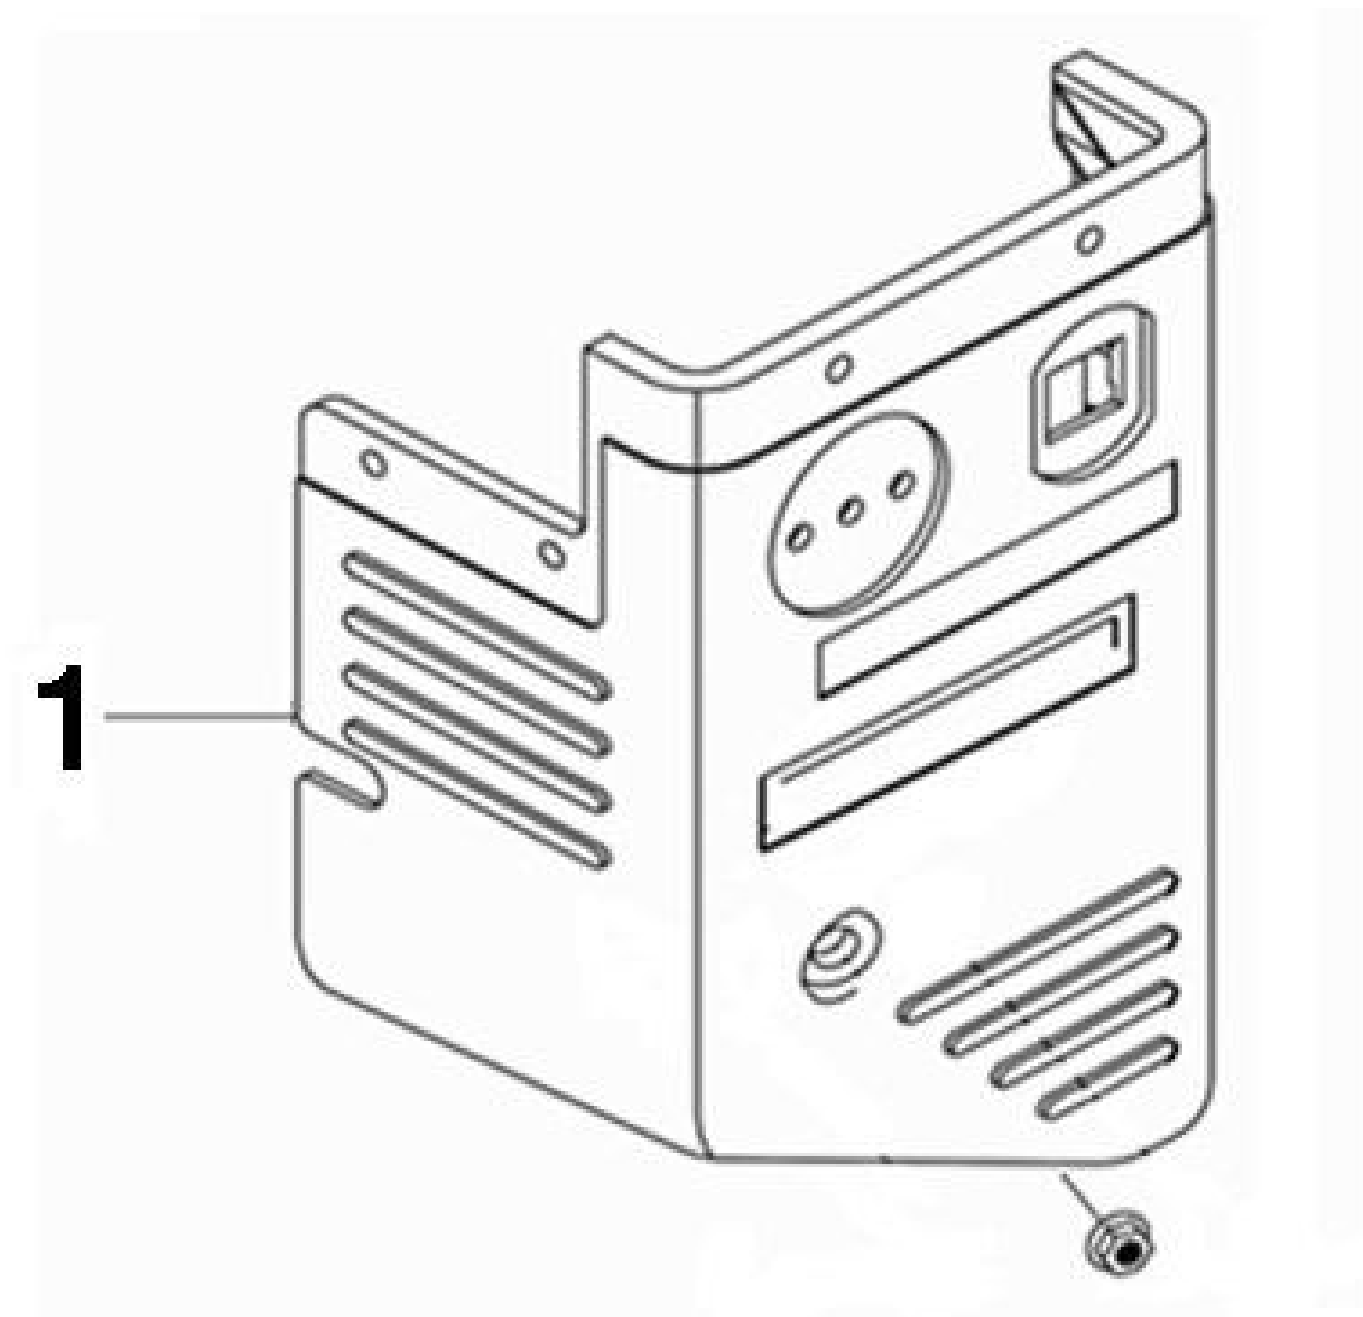


изображение Air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150689	Air filter kit				

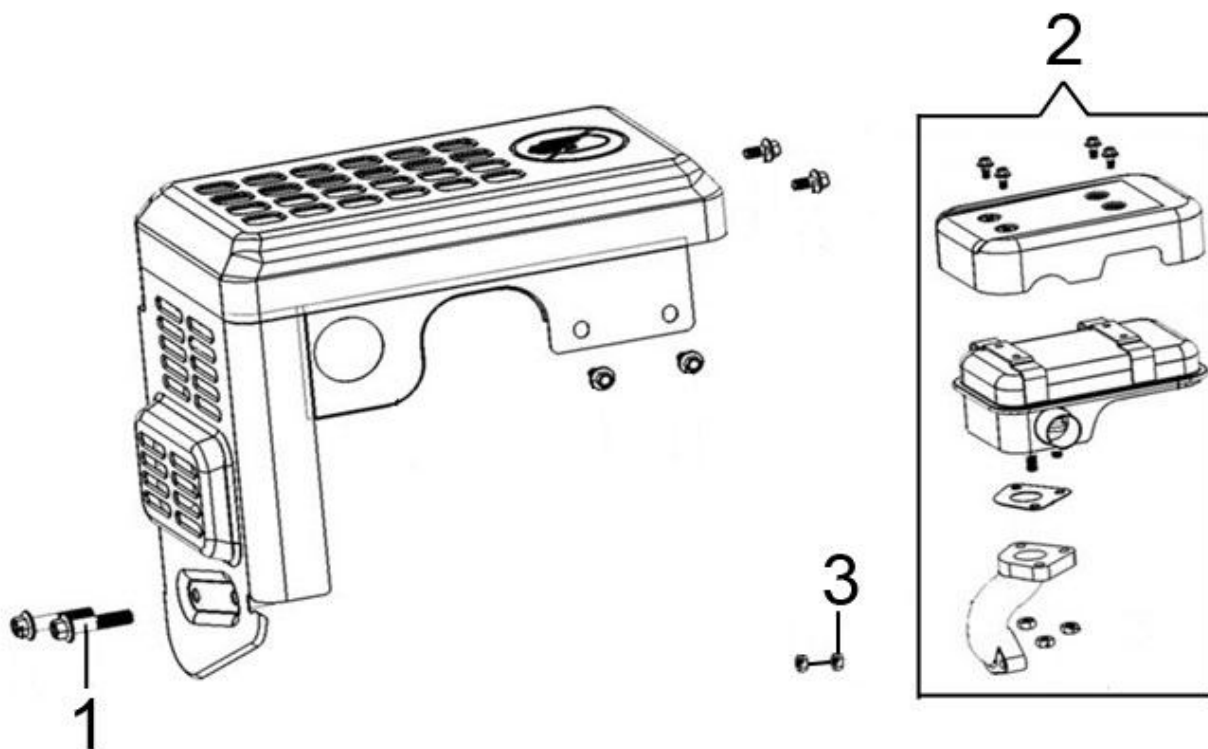


изображение Muffler

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66150317	Screw				
2	1	L66150690	Muffler				
3	5	320000028R	Nut				

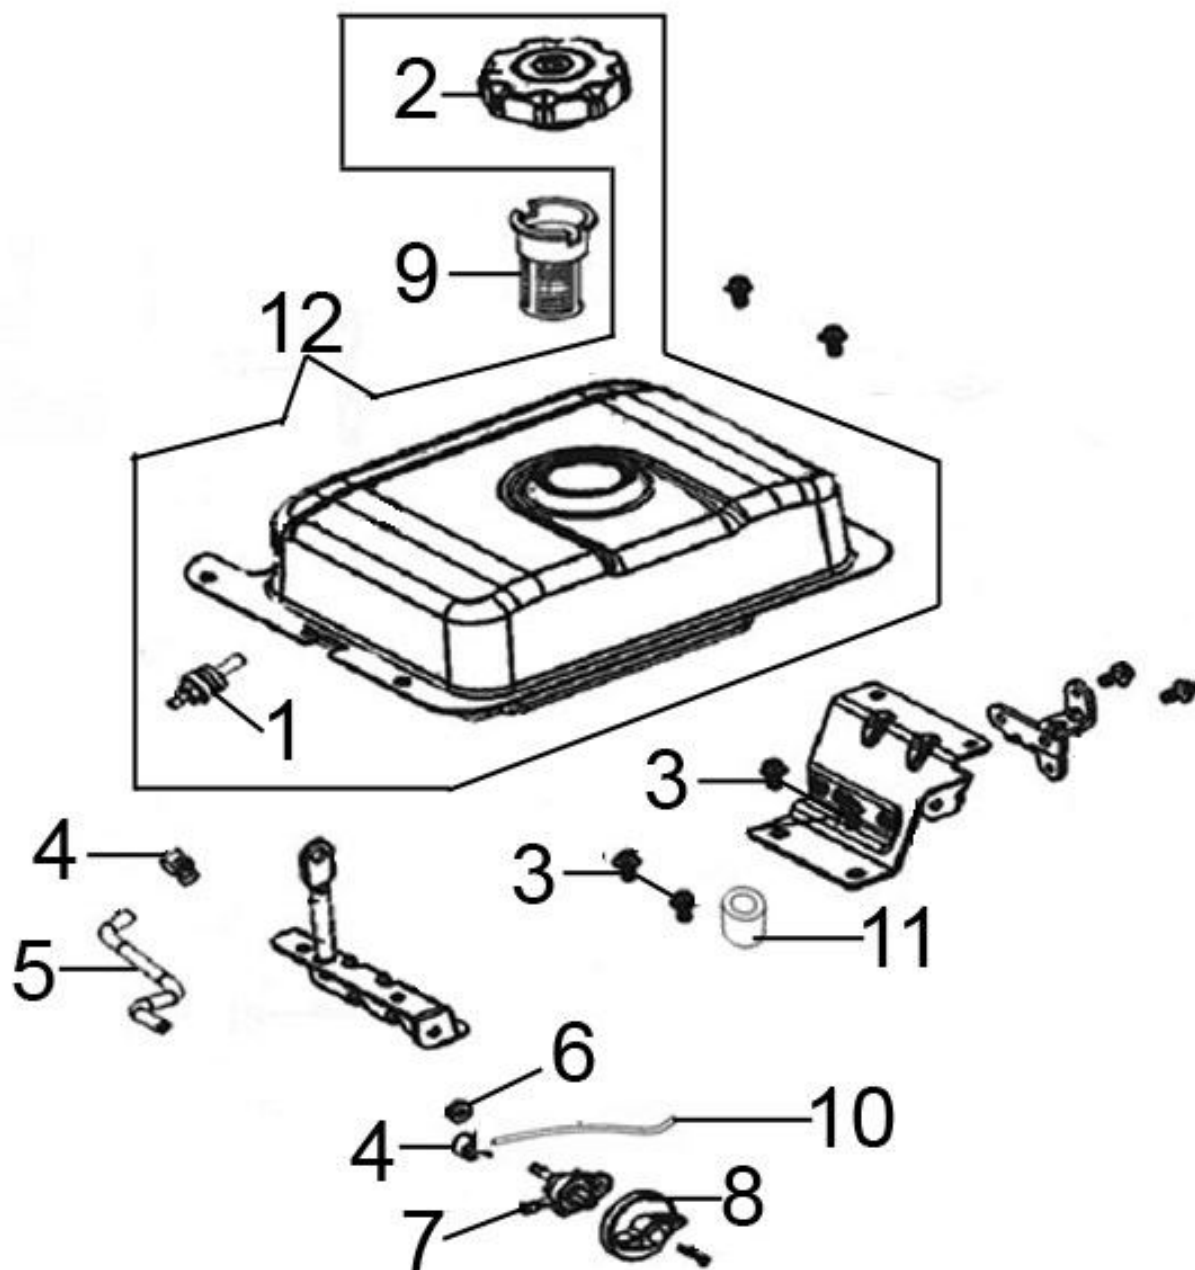

изображение Tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150295	Fitting				
2	1	L66150511	Cap				
3	1	L66150317	Screw				
4	2	L66150509	Clip				
5	1	L66150585	Tube				
6	1	L66150185	Nut				
7	1	L66150508	Switch				
8	1	L66150507	Knob				
9	1	L66150514	Filter				
10	1	L66150570	Tube				
11	1	L66150586	Tube				
12	1	L66150691	Tank				

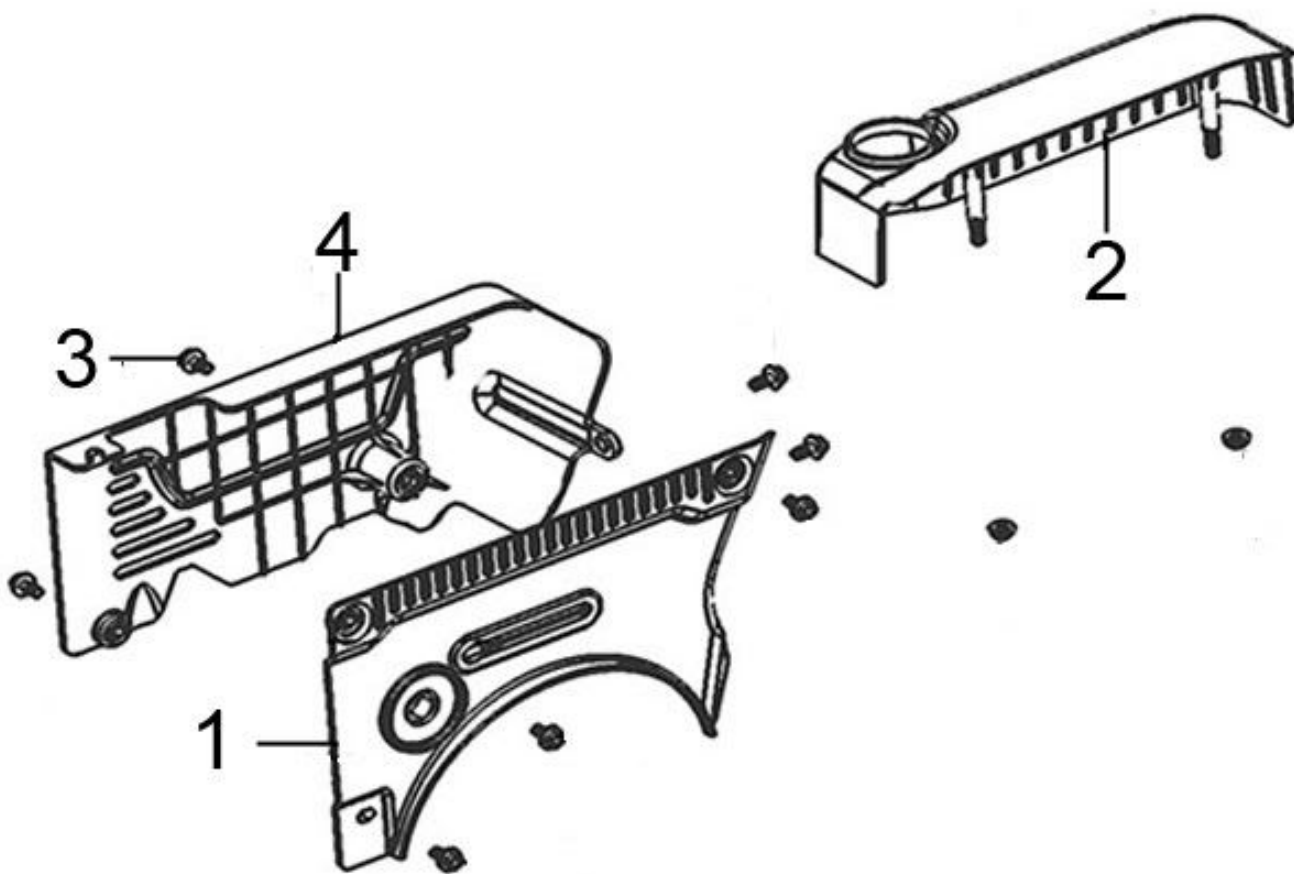

изображение Cover

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150692	Cover				
2	1	L66150647	Guard				
3	1	L66150317	Screw				
4	1	L66150649	Cover				